

CCSD-DCBCM Chairperson buttons for CCSD-DCx/Dx2

CCS 1000 D

- ▶ Priority button and microphone button
- ▶ Suitable for CCSD-DCx and CCSD-Dx2 discussion devices



The chairperson's buttons can be used when a discussion device is set up for a chairperson. The factory-installed participant's microphone button can be easily exchanged for this set of chairperson's buttons using the included special tool.

Installation/configuration notes

This is a professional product that should be installed, used and maintained by trained professionals only.

Parts included

Quantity	Component
10	CCSD-DCBCM Chairman buttons for CCSD-DCx
1	Special button removal tool

Technical specifications

Mechanical

Installation	Clips onto CCSD-DCx and CCSD-Dx2 discussion devices
Color (RAL)	RAL 9022 Pearl light gray

Ordering information

CCSD-DCBCM Chairperson buttons for CCSD-DCx/Dx2
 Replacement priority and microphone buttons for chairman mode, suitable for CCSD-DCx and CCSD-Dx2 discussion devices. Set of 10 pairs.
 Order number **CCSD-DCBCM | F.01U.420.799**



<https://www.boschsecurity.com>