


Solution 4000 control panel

ICP-SOL4-P

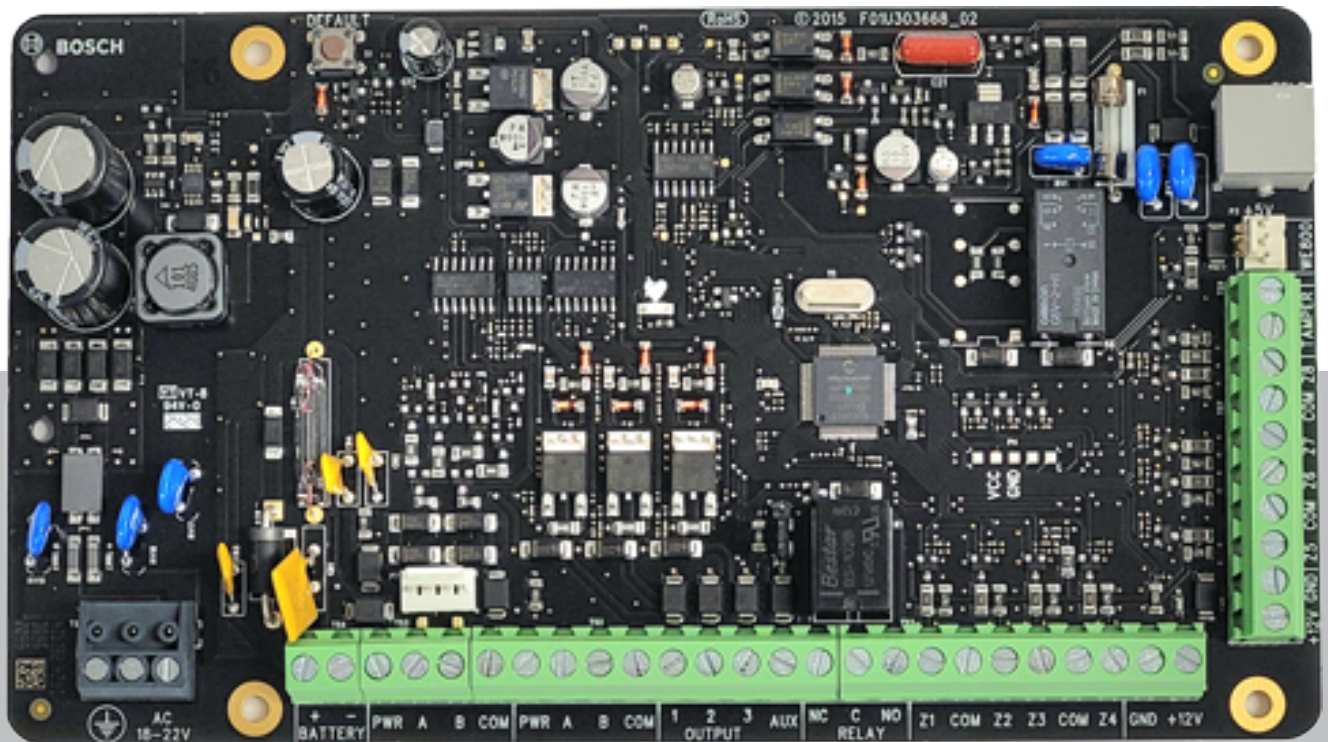

en

Quick installation guide

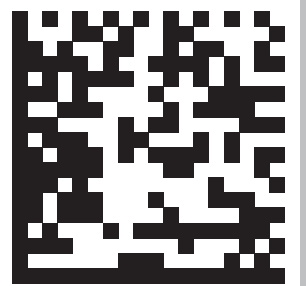


Table of contents

1	Safety	6
2	Introduction	7
3	Programming	8
3.1	Alphanumeric Codepad Menu Programming	8
3.1.1	Programming Text	11
3.2	ICON LCD Codepad Programming	11
3.3	Programming Option Bits	13
3.4	Installer's programming commands	13
4	Operating commands	14
4.1	Add/Delete RF Device (Wireless Zones)	16
4.1.1	Using an ICON codepad	17
4.1.2	Using an Alphanumeric codepad or Touchscreen	17
4.2	Add/Delete RF Repeater	17
4.3	Add/Delete RF Keyfob	18
4.3.1	Using an ICON codepad	18
4.3.2	Using an Alphanumeric codepad	19
4.4	Set the Number of Days until the First Test Report	19
4.5	Change Domestic Telephone Numbers	19
4.6	Change the Telco Arm/Disarm Sequence	20
4.7	Set STAY Mode 2 Bypass Zones	20
4.8	Report Monitor Mode (Toggle On/Off)	20
4.9	Setting Date and Time	21
4.10	Walk Test Mode	21
4.11	Event Memory Recall	21
4.12	Fault Analysis Mode	21
4.13	Inquire Cloud Status	23
4.14	RF Diagnose	23
5	Programming Parameters	25
5.1	Communication Programming	25
5.1.1	Receiver 1	25
5.1.2	Receiver 2	25
5.1.3	Receiver 3	26
5.1.4	Receiver 4	26
5.1.5	External Network Module	28
5.1.6	IPv6 Setting	28
5.1.7	IP Address Settings	28
5.1.8	Network Module Cloud Connection	29
5.1.9	Password for A-Link Plus/RSC Connection	29
5.1.10	DTMF Timing Compensation	30
5.1.11	Country Codes	30
5.1.12	Telco Arming Sequence (Call Forward On)	30
5.1.13	Telco Disarm Sequence (Call Forward Off)	30
5.1.14	Call Back Telephone Number	30
5.1.15	Ring Count	30
5.1.16	Telephone Line Fail Options	30
5.1.17	Communication Options 1	31
5.1.18	Communication Options 2	31
5.1.19	Communication Options 3	31

5.1.20	A-Link Plus Options	31
5.2	Installer Code	31
5.3	User Code Programming (User 1–32)	32
5.4	User Code Programming (User 33–64)	33
5.5	Day Alarm Zones	34
5.6	EOL Resistor Value	34
5.7	B228 EOL Resistor Value	35
5.8	Zone Programming (Zone 1–16)	35
5.9	Zone Programming (Zone 17–32)	39
5.10	Door Associated Zone Programming (Zone 129–132)	41
5.11	Swinger Programming	42
5.11.1	Swinger Shutdown Count For Siren	42
5.11.2	Swinger Shutdown Count For Report	42
5.12	Zone Status Programming	42
5.12.1	STAY Mode 2 Automatically Bypass Zones	42
5.12.2	Zone Status Reporting Options	42
5.13	RF Programming	43
5.13.1	RF Supervision Time	43
5.13.2	RADION Anti-Jamming Sensitivity	43
5.13.3	RF Receiver	43
5.13.4	RF Options	43
5.14	Report Programming	44
5.14.1	Door Reporting Options	44
5.14.2	Arm / Disarm Reporting Options	44
5.14.3	Codepad Reporting Options	44
5.15	Service Mode Programming	44
5.16	B520 Programming	45
5.17	Daylight Saving Time Programming	45
5.18	System Status Programming	46
5.18.1	Access Denied(Code Retry)	46
5.18.2	System Status Reporting Options	46
5.19	Test Report Programming	46
5.19.1	Test Report Time (Automatic)	46
5.19.2	Test Reporting Options	47
5.20	Output Programming	48
5.21	B228 output programming	53
5.22	Remote output programming	54
5.23	Time Programming	55
5.23.1	Entry Time 1	55
5.23.2	Entry Time 2	55
5.23.3	Exit Time (AWAY/STAY Modes)	55
5.23.4	Entry Guard Time For STAY Mode	55
5.23.5	Delay Alarm Report Time	55
5.23.6	Sensor Watch Time	55
5.23.7	Codepad Lockout Time	55
5.23.8	Siren Run Time	56
5.23.9	Siren Sound Rate	56
5.23.10	Auto Arming Pre-Alert Time	56
5.23.11	Auto Arming Time	56

5.23.12	Auto Disarming Time	56
5.23.13	Kiss-Off Wait Time	56
5.23.14	Speaker Beep Volume	56
5.23.15	Speaker beep programming	57
5.23.16	Codepad volume programming	57
5.23.17	Codepad backlight programming	57
5.24	Options Programming	57
5.24.1	System Options 1	57
5.24.2	System Options 2	57
5.24.3	System Options 3	58
5.24.4	System Options 4	58
5.24.5	System Options 5	58
5.24.6	Consumer Options 1	59
5.24.7	Consumer Options 2	59
5.24.8	Consumer Options 3	59
5.24.9	Partitioning Options 1	59
5.24.10	Partitioning Options 2	59
5.25	Partition Allocations	60
5.25.1	Zone Area Assignment (Zone 1-16)	60
5.25.2	Zone Area Assignment (Zone 17-32)	60
5.25.3	Codepad Assignment	60
5.25.4	User Code Area Assignment (User code 1-32)	61
5.25.5	User Code Area Assignment (User code 33-64)	61
5.26	Door Programming	62
5.27	Codepad Assigned Door	62
5.28	User Door Assignment	62
5.29	Schedule Programming	64
5.30	Default Options	64
5.31	RFID Programming	65
5.31.1	Keyfob RFID (Keyfob 1-32)	65
5.31.2	Keyfob RFID (Keyfob 33-64)	65
5.31.3	Zone/Device RFID and RF Zone Option (Zone 1-16)	66
5.31.4	Zone/Device RFID and RF Zone Option (Zone 17-32)	67
5.31.5	Repeater RFID	68
5.32	Program with A-Link Plus or Alphanumeric Codepad	68
5.32.1	Home Message	68
5.32.2	User Names	68
5.32.3	Zone Names	69
5.32.4	Area Names	69
5.32.5	Output Names	69
5.32.6	Schedules	69
5.32.7	Doors	69
5.32.8	Network Module	70
6	Appendices	71
6.1	Connections for EOL Resistors	71
6.2	Wiring Diagram	72
6.3	Component Overlay	73
6.4	Codepad Address Setting	74

1 Safety

Use latest software

Before operating the device for the first time, make sure that you install the latest applicable release of your software version. For consistent functionality, compatibility, performance, and security, regularly update the software throughout the operational life of the device. Follow the instructions in the product documentation regarding software updates.



Danger!

Touching live components can be fatal.


Disconnect the power supply before carrying out installation.



Caution!

Remove all power (AC and battery) before making any connections. Failure to do so might result in personal injury and/or equipment damage.

Old electrical and electronic equipment

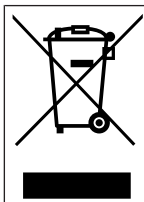

This product and/or battery must be disposed of separately from household waste. Dispose such equipment according to local laws and regulations, to allow their reuse and/or recycling. This will help in conserving resources, and in protecting human health and the environment.

2 Introduction

Thank you for choosing Solution 4000 control panel for your installation. You will find this system extremely flexible, reliable, and easy to use.

This quick installation guide is supplied with the system to provide users with enough basic information to wire, configure, and program the system. Due to the systems many programmable features and options, we suggest that you obtain the Installation Guide that provides detailed information on system options, functions, and programming methods.

Throughout this document, the words “control panel ” refer to Solution 4000 control panels covered by this document:

- ICP-SOL4-P Control panel, 32-zone

Number of...	Solution 4000
Users	64
Keyfobs on WE800EV2 - HCT-4	21
Keyfobs on RADION B810 - RFKF, HCT-4UL	64
Areas / partitions	2
Zones / inputs	8 + 8 (ZD)
Onboard outputs	4
Alphanumeric LCD codepad IUI-SOL-TEXT or ICON LCD codepad IUI-SOL-ICON ¹	4
Touchscreen codepad IUI-SOL-TS5 or IUI-SOL-TS7 ²	1
Wireless receiver WE800EV2 ³	1
RADION receiver B810	1
RADION repeater RFRP2	8
B228 8-Input, 2-Output Expansion Module	3
B308 Octo-output Module	3
B426-M Conettix Ethernet Communication Module ⁴	2
B450-M Conettix Plug-in Communicator Interface with B44x Plug-in cellular module	2
B901 Door Controller	4
B520 Auxiliary power supply module	4

Table 2.1: Control Panel Capacities

¹ Including the touchscreen codepad, up to 4 codepads can be used per system. SDI2 Bus supplies max 900 mA for IUI-SOL-TEXT / IUI-SOL-ICON codepads, B810, B308, B426-M and B450-M;

² IUI-SOL-TS5 or IUI-SOL-TS7 codepad on its own uses 800 mA and needs own additional 12 VDC 1A power supply.

³ Receiver WE800EV2 and B810 are mutually exclusive.

⁴ Up to two B426-M/ B450-M can be used per system.

3 Programming

The programming options of the system are stored in a non-volatile EPROM. This memory holds all information during a total power loss and can be changed as many times as required.


The entire programming sequence consists of entering a location number and changing the data as required.

Use the following methods to program the system:

- Codepad
- A-Link Plus Software
- B426-M

3.1 Alphanumeric Codepad Menu Programming

1. Enable Alphanumeric codepad and confirm that the system is in disarmed status.
2. To enter Installer's Programming Menu, enter the installer code (Default = 1234) followed by the [#] key or [-] key.
3. Programming: Select the menu and operate according to the menu prompt.
 - Down to the next menu: Press [▼]
 - Up to the previous menu: Press [▲]
 - Enter menu or confirm input : [#]
 - Back to the menu or exit programming item setting: Press [-]; or press and hold [-] for 3 seconds to exit programming without saving changes.
 - Operate according to the menu prompt. Select menu and enter or select data for specific programming items to complete programming, step by step. For specific items and options, refer to Programming Parameters.
4. After completing input, press [-] to get back to the previous menu. Complete all programming input by repeating step 3 and press [-] to get back to the current main menu level by level.
5. To use the Alphanumeric codepad in location programming mode (like IUI-SOL-ICON), enter programming option [8] [1].
 - In location programming mode enter the programming location then [#].
 - Enter the new data then [*] to save it. Enter [#] to go to the next location.
6. When [Confirm to Save Parameter Changes?] display, press [#] to save parameter changes , exit menu programming and reset system.

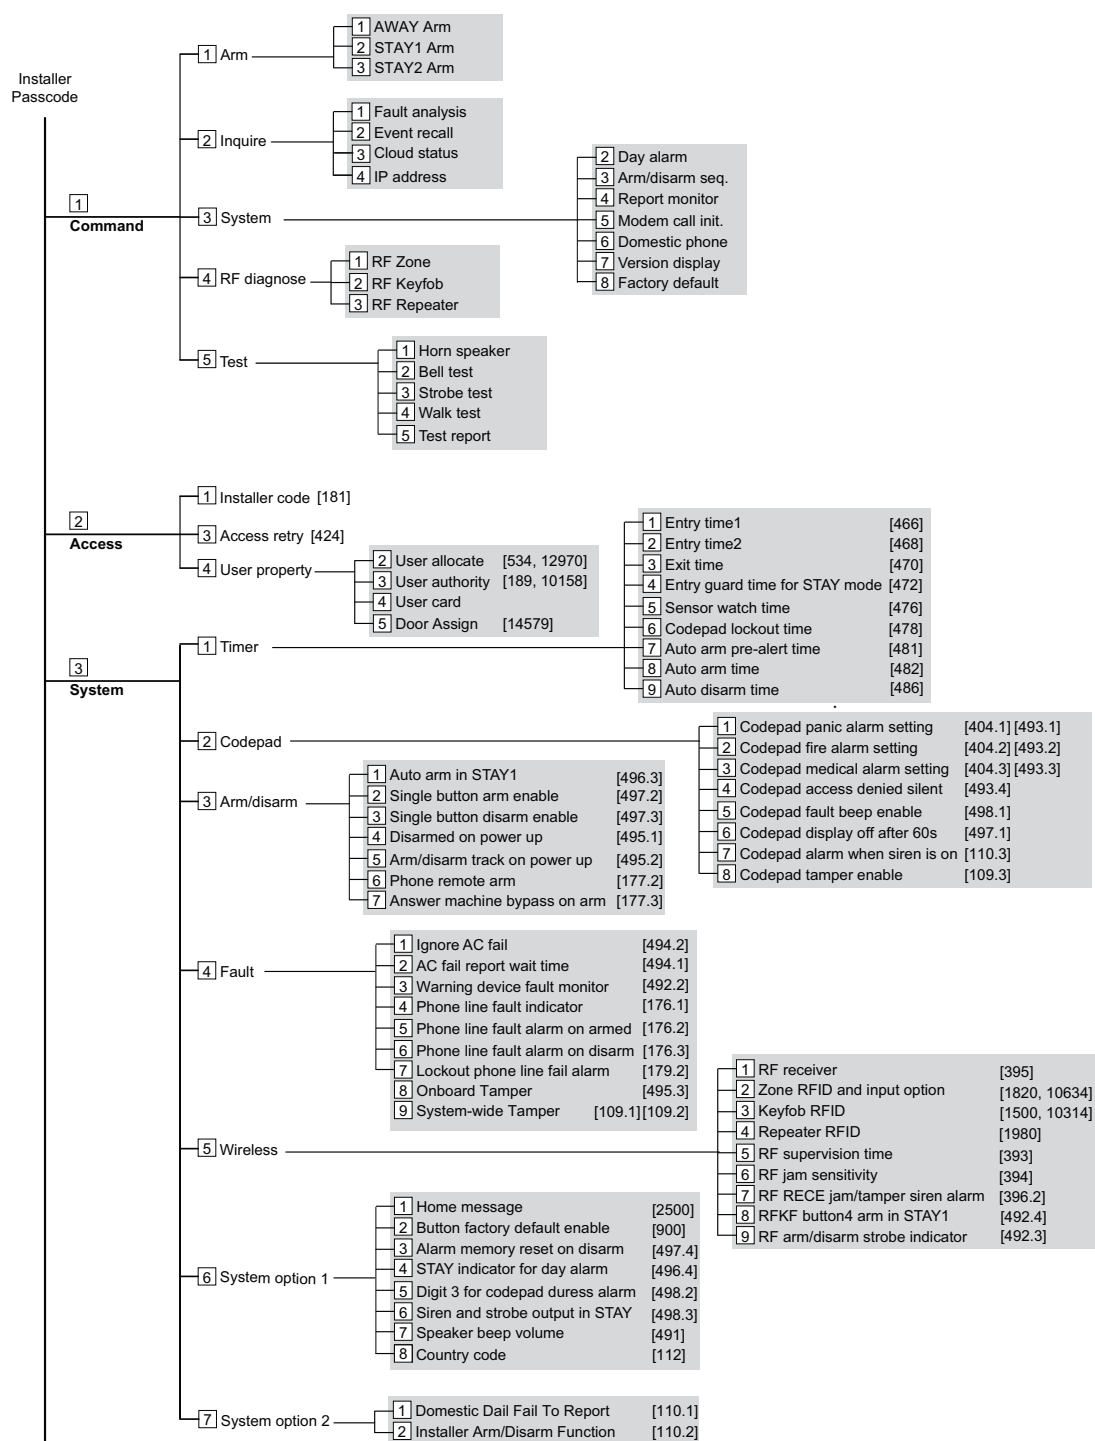

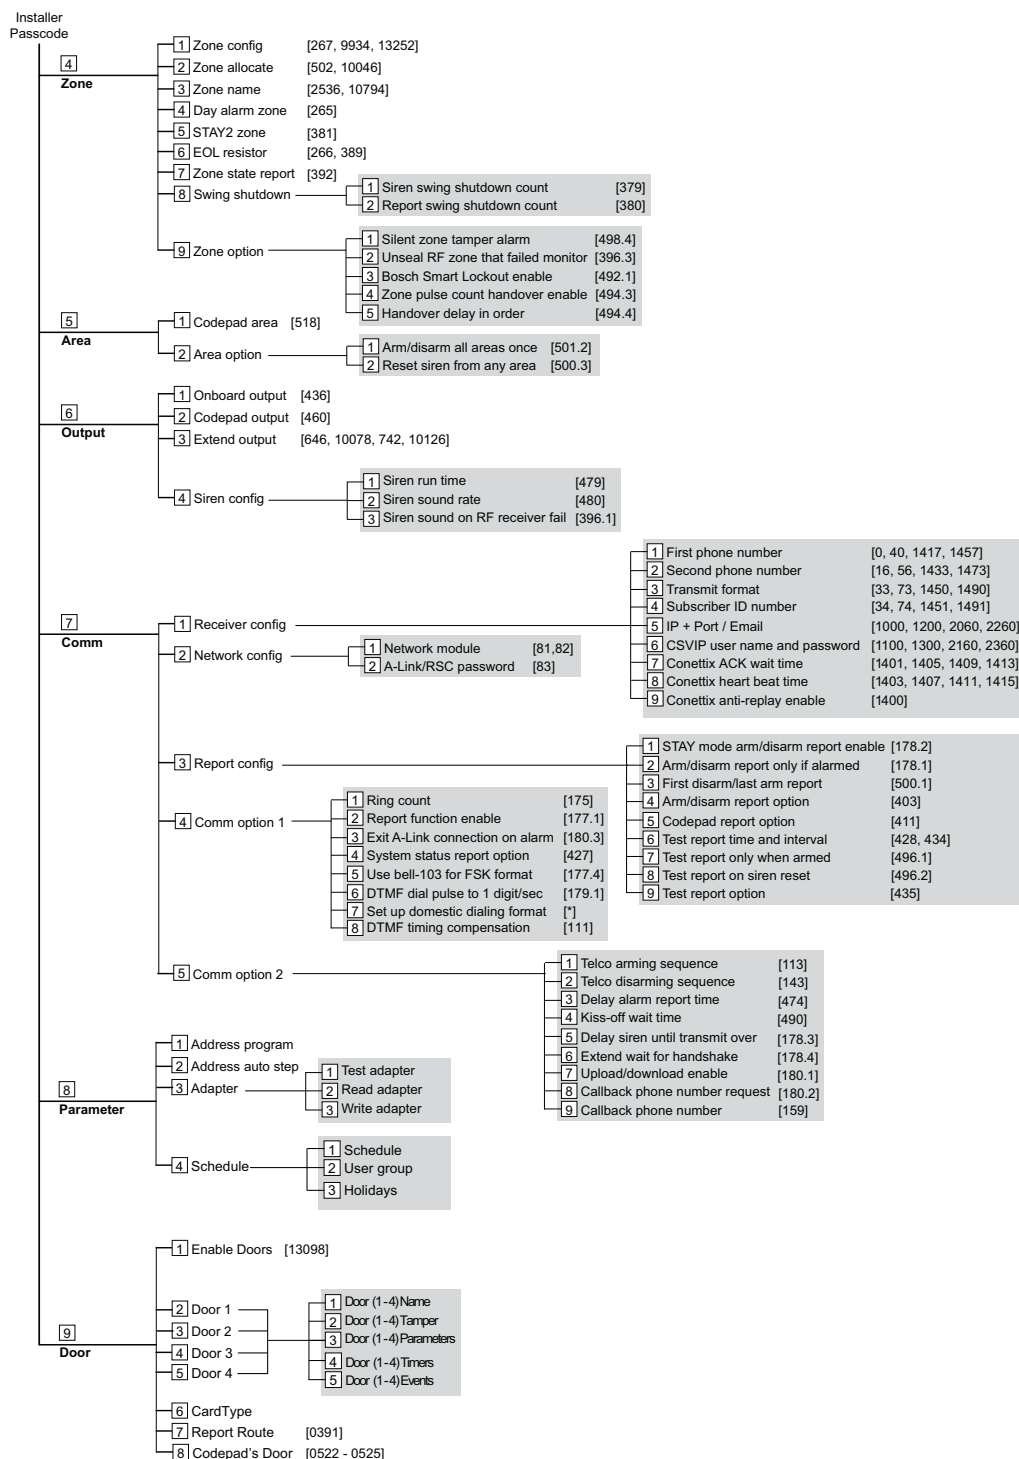


Figure 3.1: Alphanumeric Codepad Programming Menu

3.1.1

Programming Text

When programming text via the Alphanumeric codepad, enter sensitive alphanumeric characters as the table below.

Each numeric key represents a different group of characters. Pressing the same numeric key repeatedly will step you through the available characters assigned to the key.

Codepad Key	Characters / Function	Codepad key	Characters / Function
▲	Step back former character	6	[m], [n], [o], [6]
—	Exit item setting	7	[p], [q], [r], [s], [7]
▼	Move to next character	8	[t], [u], [v], [8]
1	[.], [@], [:], [_], [1]	9	[w], [x], [y], [z], [9]
2	[a], [b], [c], [2]	*	Case shift
3	[d], [e], [f], [3]	0	[Space], [,], [/], [?], [0]
4	[g], [h], [i], [4]	#	Confirm item setting
5	[j], [k], [l], [5]		

Table 3.1: Alphanumeric on Alphanumeric codepad

3.2

ICON LCD Codepad Programming

The system must be disarmed (with no active alarm) to program the system. If there is an active alarm or the system is armed, enter the code for User 1 (Default = 2580) followed by the [#] key. (User Code 1 is factory default as the Master Code.)

- Enter Installer's Programming Mode: Enter the installer code (Default = 1234) followed by the [#] key. Two beeps are heard and both the STAY and AWAY indicators flash simultaneously to indicate that you entered programming mode. The codepad indicators display the current data programmed in Location 0000 (first location of the Primary Telephone Number).
- Programming: Move to the required location and program new data into location.
 - To move to another programming location, enter the location number followed by the [#] key. The data in the new location is displayed using the codepad indicators. (For example, if you enter [34 #], the system jumps to Location 0034, the beginning of the Subscriber ID Number For Receiver 1.)
 - To move to the next location, press the [#] key. This steps you to the next location. The data in the next location is displayed using the codepad indicators. (For example, if you are currently positioned at Location 0034, pressing [#] key takes you to Location 0035.)
 - To step back one location, press the [*] key. (For example, if you are currently positioned at Location 0035, pressing the [*] key returns to Location 0034.)
 - To change data in the current location, enter the new value (0 to 15) followed by the [*] key. This stores the new data into the location. (For example, if you enter the value [14*], the Zone 14 indicator display to represent the new data value.)
- Exit from Installer's Programming Mode with saving changes: Enter [960#]. Two beeps are heard and the STAY and AWAY indicators no longer display. The system returns to the disarmed state and is ready for use.

Task	Keystrokes
Enter Installer's Programming Mode	[1234#]

Task	Keystrokes
Exit from Installer's Programming Mode without saving changes	[958#]
Exit from Installer's Programming Mode with saving changes and panel reset	[960#]
Step to next Location	[#]
Step back one Location	[*]
Program new data into Location	[Data][*] (Data = 0 to 15)
Jump to another Location	[Location No.] [#]

Table 3.2: Quick Guide to Programming

3.3 Programming Option Bits

Use option bits to program any combination of the four different options in one location by adding the options together. Programming a zero disables all four options.

Example

If at Location 0178 you only want options 1, 2, and 4, add the numbers together and the total is the number to be programmed. The number to be programmed is 7 ($1 + 2 + 4 = 7$).

Option	Description
1	Arm/Disarm Reports only if alarmed
2	STAY Mode Arm/Disarm Reports Enable
4	Delay siren until transmission complete
8	Extend handshake wait time from 30 to 60 sec.

Table 3.3: Programming Option Bits

3.4 Installer's programming commands

Installer Programming Commands, displayed in below table can only be used when you enter Installer's Programming Mode. Enter the command followed by the [#] key.

Command	Description
958	Exit from Installer's Programming Mode without saving changes
959	Test IUI-SOL-ADAPTER
960	Exit from Installer's Programming Mode with saving changes and system reset
961	Reset the control panel to factory defaults
962	Copy the control panel memory to IUI-SOL-ADAPTER
963	Copy IUI-SOL-ADAPTER data to the control panel memory
965	Set up domestic dialing format
966	Enable/disable the automatic stepping of locations during programming
999	Display the control panel firmware version number

Table 3.4: Installer's Programming Commands

4 Operating commands

The system supports programmable 1 - 4 - digit Installer code or User Code to execute the following operating commands.

No identical User Codes are allowed. User Codes are not permitted to be the same as Installer codes.

For [Code] + [Number] commands, the code must be 4 - digit.

Access Key:

A = All have access (no code required)

M or U = Master access (Master Code required), or User access (User Code required)

I = Installer access (Installer Code required)

Command	Function Description	Access
Code+[0][#]	Add or Delete RF Devices	(I)
Code+[0][#]	Add or Delete RF Repeaters / Keyfobs (ICON codepad only)	(I)
Code+[1][#]	Set Days until the First Test Report	(I)
Code+[2][#]	Change Domestic Phone Number	(I)
Code+[3][#]	Change Telco Arm/Disarm Sequence	(I)
Code+[4][#]	Setting STAY Mode 2 Zones	(I)
Code+[6][#]	Enable Report Monitor Mode	(I)
Code+[7][#]	Walk Test Mode	(I)
Code+[8][#]	Event Memory Recall Mode	(I)
Code+[9][#]	AWAY Arm/Disarm	(I)
Code+[9][*]	STAY 1 Arm/Disarm	(I)
Code+[#]	Enter Programming Menu	(I)
Code+[-]	Enter Programming Menu	(I)
Code+[7][3][#]	Service Mode (enable/disable)	(I)

Table 4.1: Installer command

Remark: For operation of Code + [9][#] or Code + [9][*] command, make sure to enable Installer Arm/Disarm Function in Location 110.2.

Command	Function Description	Access
Code+[0][#]	Arm/Disarm both areas at the same time	(M)
Code+[1][#]	Change or Delete User Code and RF Keyfob	(M)
Code+[2][#]	Change Domestic Phone Number	(M)
Code+[3][#]	Change Telco Arm/Disarm Sequence	(M)
Code+[4][#]	Setting STAY Mode 2 Zones	(M)
Code+[5][#]	Turn Output On/Off	(M)

Command	Function Description	Access
Code+[6][#]	Setting the Date and Time	(M)
Code+[7][#]	Walk Test Mode	(M)
Code+[8][#]	Event Memory Recall Mode	(M)
Code+[9][9][8][9][#]	System Reset	(M)
Code+[9][4][1][#] Code+[9][4][2][#]	Reset Network Module 1 / 2	(M)
Code+[9][0][#]	Cycle door (only via assigned codepad)	(M)
Code+[9][1][#]	Cycle / Lock / Unlock / Secure / Unsecure door and Schedule	(M)
Code+[9][#]	Duress Disarm	(U)
Code+[*]	STAY 1 Arm / Disarm or STAY 2 Disarm	(U)
Code+[#]	AWAY Arm / Disarm	(U)
Code+[0][1][*]	STAY1 Arm/Disarm Area 1 Or STAY2 Disarm Area 1	(U)
Code+[0][2][*]	STAY1 Arm/Disarm Area 2 Or STAY2 Disarm Area 2	(U)
Code+[0][1][#]	AWAY Arm/Disarm Area 1	(U)
Code+[0][2][#]	AWAY Arm/Disarm Area 2	(U)
Code+[-]	Enter User Menu (Alphanumeric codepad only)	(U)
[*]+Code+[*]	Zone Bypass (Zone Isolating)	(U)

Table 4.2: User or Master command

Long Press Command	Function Description	Access
Hold-down [0] 3sec	Arm/Disarm the system in STAY Mode 2	(A)
Hold-down [1] 3sec	Horn Speaker Test	(A)
Hold-down [2] 3sec	Bell Test	(A)
Hold-down [3] 3sec	Strobe Test	(A)
Hold-down [4] 3sec	Turn Day Alarm On/Off	(A)
Hold-down [5] 3sec	Fault Analysis Mode	(A)
Hold-down [6] 3sec	Initiate a Modem Call	(A)
Hold-down [7] 3sec	Reset Latching Output	(A)
Hold-down [8]	Change the Codepad Buzzer Tone and Codepad Area Display	(A)

Long Press Command	Function Description	Access
Hold-down [9] 3sec	Send Test Report	(A)
Hold-down [#] 3sec	Arm the system in AWAY Mode	(A)
Hold-down [*] 3sec	Arm/Disarm the system in STAY Mode 1	(A)
Hold-down [-] 3sec	Exit Menu Without Saving changes	(A)

Table 4.3: Long press command

Two Keys Command	Function Description	Access
[1]+[3]	Codepad Panic Alarm	(A)
[4]+[6]	Codepad Fire Alarm	(A)
[7]+[9]	Codepad Medical Alarm	(A)
[*]+[#]	Codepad Panic Alarm	(A)

Table 4.4: Two keys command

Other Command	Function Description	Access
[*]+[*]	Zone Bypass	(U)
[-]	Enter General Menu (Alphanumeric codepad only)	(A)
[#]	Stop Walk Test/New Fault Confirm	(A)
Code+[1][2][3][#]	Inquire Cloud status (ICON codepad only)	(I, M)
Code+[1][4][1][#]	RF zone diagnose (ICON codepad only)	(I, M)
Code+[1][4][2][#]	RF keyfob diagnose (ICON codepad only)	(I, M)
Code+[1][4][3][#]	RF repeater diagnose (ICON codepad only)	(I, M)

Table 4.5: Other command

**Notice!**

Most commands below are operated via IUI-SOL-ICON codepad.

4.1

Add/Delete RF Device (Wireless Zones)

**Notice!**

Set RF receiver as RADION Receiver B810 (Value 1 in Location 395), and set Zone Source of RF zones as RF (Location 754 to 769).

**Notice!**

Only zone number 1 to 16 displays through zone indicators on the ICON codepad.

4.1.1**Using an ICON codepad****Add RF Device**

1. Enter the Installer Code, followed by [0] and the [#] key (for example, [12340#]).
2. Enter the device number (1 to 32) you want to add, followed by the [#] key.
3. Enter the RF device ID manually or switch to auto mode.
 - In manual mode, enter the 9-digit RF device ID number, followed by the [#] key.
 - Press [#] key to switch to auto mode. When the corresponding icon number flashes, trigger the sensor or tamper it to learn it into the panel. The panel learns the RF device ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm the operation.
4. Enter [#] key to accept the default value for the RF zone input option. Or enter a different zone input option (0 to 15), followed by the [#] key.

RF zone/device ID numbers and RF zone input option, refer to Zone/Device RFID and RF Zone Option. Zone source programming, refer to Zone Programming.

Delete RF Device

1. Enter the Installer Code, followed by [0] and the [#] key.
2. Enter the device number (1 to 32) you want to delete, followed by the [#] key.
3. Press the [*] key to delete the RF device.

4.1.2**Using an Alphanumeric codepad or Touchscreen****Add RF Device**

1. Enter the Installer Code, followed by [0] and the [#] key (for example, [12340#]).
2. Enter the zone (device) number (1 to 32) you want to add, followed by the [#] key.
3. Enter the RF device manually, or press [*] to switch to auto mode.
 - In manual mode [M], enter the 9-digit RF device ID number.
 - In auto mode [A], trigger the sensor or tamper it to learn it into the panel. The codepad will display RFID number.
4. Press [#] to confirm the operation.

Delete RF Device

1. Enter the Installer Code, followed by [0] and the [#] key.
2. Enter the device number (1 to 32) you want to delete, followed by the [#] key.
3. Press the [*] key to delete the RF device.
4. Press [#] to confirm the operation.

4.2**Add/Delete RF Repeater****Notice!**

Set RF receiver as RADION Receiver B810.

Add RF Repeater

1. Enter the Installer Code, followed by [0] and the [#] key (for example, [12340#]).

2. Enter the point ID of RADION Repeater (822 to 829) you want to add (822 = 1, 823 = 2, etc.), followed by the [#] key. Repeater number (1 to 8) displays on the ICON codepad.
3. Use manual mode or auto mode to configure Repeater RFID.
 - In manual mode, enter the 9-digit RF Repeater ID number, followed by the [#] key.
 - Or press [#] key to switch into auto mode. When the corresponding icon number flashes, tamper the RF Repeater. The panel learns the RF Repeater ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm.
4. Enter [#] key to confirm the operation, or enter [*] to cancel.

Delete RF Repeater

1. Enter the Installer Code, followed by [0] and the [#] key.
2. Enter the point ID of RADION Repeater (822 to 829) you want to delete, followed by the [#] key.
3. Press the [*] key to delete the RF Repeater.

Example:

To delete existing RF Repeater 8: Enter your installer code and press [0] [#] [8] [2] [9] [#] [*].

4.3 Add/Delete RF Keyfob

4.3.1 Using an ICON codepad

Add Keyfob on WE800EV2



Notice!

Learn all keyfobs via WE800EV2 receiver Learn/Delete button before adding the keyfobs to the system. Refer WE800EV2 manual for learn/delete fobs.



Notice!

Set RF receiver as WE800EV2 Receiver (Value 2 in Location 395).

1. Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).
2. Enter the keyfob number (301 to 321) you want to add (301 = keyfob 1, 302 = keyfob2, etc.), followed by the [#] key. Up to 21 keyfobs can be added, but only current keyfob number (1 to 16) displays through zone indicators on the ICON codepad.
3. The user number will display on the codepad. Press [#] to continue.
4. When the corresponding icon number flashes, press button 1 or 2 of the keyfob. The panel learns the Keyfob ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm.
5. Enter [#] key to confirm the operation, or press [*] to cancel.

Add Keyfob on RADION B810



Notice!

Set RF receiver as RADION Receiver B810 (Value 1 in Location 395).

1. Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).
2. Enter the keyfob number (301 to 364) you want to add (301 = keyfob 1, 302 = keyfob2, etc.), followed by the [#] key. Up to 64 keyfobs can be added, but only current keyfob number (1 to 16) displays through zone indicators on the ICON codepad.
3. Use manual mode or auto mode to configure keyfob RFID.

- In manual mode, enter the 9-digit RF device ID number, followed by the [#] key.
 - Or press [#] key to switch into auto mode. When the corresponding icon number flashes, press button 1 or 2 of the keyfob. The panel learns the Keyfob ID number and the last digit of RFID number displays on the codepad. Press [#] key to confirm.
4. Enter [#] key to confirm the operation, or press [*] to cancel.

Delete Keyfob

1. Enter the Master Code, followed by [1] and the [#] key.
2. Enter the keyfob number (301 to 364) you want to delete, followed by the [#] key.
3. Press the [*] key to delete the keyfob.

Example:

To delete existing keyfob 1: Enter your Master Code and press [1] [#] [3] [0] [1] [#] [*].

4.3.2 Using an Alphanumeric codepad



Notice!

Set RF receiver as WE800EV2 or RADION receiver through the menu [3][5][1].

Add the Keyfob

1. Enter the Master Code, followed by [1] and the [#] key (for example, [25801#]).
2. Choose a user number then press the [#] key.
3. Choose keyfob then press the [#] key.
4. Keyfob RFID displays. The letter "M" appears in the top right corner of the display indicating it is in manual mode.
 - In manual mode, enter the 9-digit RADION keyfob RFID, followed by the [#] key.
 - Or press [*] key to switch into auto mode to configure keyfobs. The letter 'A' should appear in the top right corner of the display indicating it is in automatic mode. Hold button 1 or 2 of the keyfob till codepad displays RFID number. Press [#] key to confirm.
5. Enter [#] key to confirm the operation, or press [*] to cancel.
6. Press menu [-] to exit.

Delete the Keyfob

1. Enter the Master Code, followed by [1] and the [#] key.
2. Choose a user number then press the [#] key.
3. Choose keyfob then press the [#] key.
4. Press the [*] key to blank the RFID and then press the [#] to accept.
5. Press the [-] key to back, and press the [#] to save and exit.

4.4 Set the Number of Days until the First Test Report

1. Enter the Installer Code, followed by [1] and the [#] key.
2. Enter the Number of Days (0 to 15) until the first Test Report is sent, followed by the [#] key.

4.5 Change Domestic Telephone Numbers

Set up receiver transmission format as Domestic.

1. Enter the Installer Code or Master Code, followed by [2] and the [#] key.
 2. Enter the sequence number of the telephone number, followed by the [#] key. For example, Telephone Number 1 is [1] [#], Telephone Number 2 is [2] [#], etc.
 3. Enter all digits of the telephone number, for example, [96721717], followed by the [#] key.
- If there is more than one telephone number, repeat Step 1 to Step 3.

4.6 Change the Telco Arm/Disarm Sequence

Telco Arm Sequence (Call Forward On)

1. Enter the Installer Code or Master Code followed by [3] and the [#] key.
2. Press [1] followed by the [#] key.
3. Enter the **Call Forward On** sequence.
4. Press the [#] key to exit.

Telco Disarm Sequence (Call Forward Off)

1. Enter the Installer Code or Master Code followed by [3] and the [#] key.
2. Press [2] followed by the [#] key.
3. Enter the **Call Forward Off** sequence.
4. Press the [#] key to exit.

4.7 Set STAY Mode 2 Bypass Zones

1. Enter the Installer Code or Master Code, followed by [4] and the [#] key.
2. Enter the Zone Number you want the system to automatically isolate, followed by the [*] key.
Repeat if more than one zone must be automatically isolated when armed in STAY Mode 2.
3. Press the [#] key to exit.

4.8 Report Monitor Mode (Toggle On/Off)

To turn Report Monitor Mode on:

1. Enter the Installer Code, followed by [6] and the [#] key. Three beeps sound.
2. Zone indicators turn on to indicate report events for receiver 1/2.
3. Press the [#] key to shift the zone indicators to indicating report events for receiver 3/4. Press the [*] key to switch back to receiver 1/2.
4. Press and hold the [9] key until two beeps are heard to send a test report.

To Turn Report Monitor Mode off:

Enter the Installer Code, followed by [6] and the [#] key. Two beeps sound.

Zone LED for Receiver 1/3	Zone LED for Receiver 2/4	Report Event
1	9	Telephone Line Seized
2	10	Dialing Telephone Number / Network Connect
3	11	Handshake Received
4	12	Data Being Sent
5	13	Kiss-Off Received
None	None	Released Telephone Line / Idle

Table 4.6: Report Monitor Mode Indications



Notice!

You must exit from Report Monitor Mode to resume normal operations.

4.9 Setting Date and Time

1. Enter the Master Code, followed by [6] and the [#] key (for example, [25806#]).
2. Enter the day (DD), month (MM), and year (YY) following by the hour (HH) and minute (MM). To program the hour of the day, use the 24:00 hour format.
3. Press the [#] key to exit.

4.10 Walk Test Mode

1. Enter the Installer Code or Master Code, followed by [7] and the [#] key.
2. Test each zone as required.
3. Press the [#] key to exit.

4.11 Event Memory Recall

Enter the Installer Code or Master Code, followed by [8] and the [#] key.

The last 512 events are displayed in reverse order (for example, most recent to least recent).

4.12 Fault Analysis Mode

If a fault occurs, the FAULT or MAINS indicators flash and the codepad beeps once every minute.

If the AC MAINS supply fails, the MAINS indicator flashes until the AC MAINS supply is restored.

Pressing the [#] button once acknowledges the fault and stops the codepad from beeping once every minute.

How to Determine the Type of System Fault

To determine which system fault occurred, enter Fault Analysis Mode by following the steps below:

1. Hold down the [5] key until two beeps sound. The STAY and AWAY indicators flash in unison. A zone indicator displays the type of fault that occurred (for example, Zone 1 = System Fault). Refer to Fault Indicators for the list of possible system faults.
2. To further determine the type of fault condition, press the key that corresponds to the zone indicator displayed. For example, if Zone 1 displayed System Fault, press the [1] key to display which system fault occurred.
3. To exit Fault Analysis Mode and return to the disarmed state, press the [#] key. The FAULT indicator continues to display and the codepad stops sounding once a minute.

Fault Indicators

Zone Indicator	Fault Description	Press Button	Zone Indicator	Fault Condition
1	System Fault	1	1 2 3 4 5 7 8 9 to 16	Battery Fail Date and Time RF Receiver Fail Output 1 to 3 Fail Telephone Line Fail Power Supply Fail Onboard Tamper RF Repeaters 1 to 8 Fail
2	RF Low Battery	2	1 to 16	Zones 1 to 16 RF Low Battery
3	Zone Tamper Alarm	3	1 to 16	Zones 1 to 16 Tamper Alarm
4	Sensor Watch Fault	4	1 to 16	Zones 1 to 16 Sensor Watch Fail

Zone Indicator	Fault Description	Press Button	Zone Indicator	Fault Condition
5	RF Sensor Missing	5	1 to 16	Zones 1 to 16 RF Sensor Missing
6	Communication Fail	6	1 2 3 4 5 6	Receiver 1 Fail Receiver 2 Fail Receiver 3 Fail Receiver 4 Fail IP Module 1 Fail IP Module 2 Fail
7	Input / Output and Codepad Fail	7	1 to 3 5 to 8 9 to 11	Output Expanders 1 to 3 Fail Codepads 1 to 4 Fail Input Modules 1 to 3 Fail
8	Keyfob Low Battery	8	1 to 16	Keyfobs 1 to 16 Low Battery
9	Door and Power Supply Module Fail	9	1 to 4 5 to 8	Power Module 1 to 4 Fail Door 1 to 4 Fail

Table 4.7: Fault Indicators

1 System Fault

A system fault only displays when any of the following faults occur. After entering Fault Analysis Mode, press the [1] key to determine which of the following faults occurred.

Low Battery Fault - A low battery fault registers when the system detects a low capacity back-up battery. The system automatically performs a battery test every four hours and every time you arm the system.

Date and Time - The date and time fault registers every time the system is powered down.

RF Receiver Fail - This fault registers when the RF wireless receiver unit detects RF jamming, the RF wireless receiver is disconnected from the control panel or failed, or the RF receiver's cover tamper switch is activated.

Output 1 to 3 Fail - This fault registers when the system detects output 1 - 3 as warning device (Horn Speaker, Siren Running, Strobe) is disconnected or short. This fault clears once all outputs are reconnected. Your installer must program the system for this feature to operate.

Telephone Line Fail - A telephone line fault registers when the system detects that the telephone line is disconnected from the control panel. Your installer must program the system for this feature to operate.

Power Supply Fail - This fault occurs when AUX power supplies fails, +12V power fails, or SDI2 Bus power fails. Contact your installer as soon as this fault displays.

Onboard Tamper - This fault occurs when the system detects the control panel is tampered.

RF Repeater Fail - The RF repeater 1 to 8 fault registers once the system detects that the wireless repeater is disconnected or the repeater tamper is triggered.

2 RF Low Battery

This fault occurs when any of the RF wireless devices report a low battery condition to the control panel. While in Fault Analysis Mode, press the [2] key until two beeps sound. This displays the zone reporting the RF Low Battery fault.

3 Zone Tamper Fail

This fault occurs when any zone with tamper becomes an open or short circuit. Press the [3] key until two beeps sound. This displays the zone reporting the tamper fail fault.

4 Sensor Watch Fault

A sensor watch fault registers because one or more detection devices failed to detect any movement during the disarmed state for the time period programmed by your installer. The fault clears once the zone in question detects movement and resets. Press the [4] key until two beeps sound. This displays the zone reporting the sensor watch fault.

5 RF Sensor Missing

An RF sensor missing fault registers because one or more RF detection devices fails to communicate to the RF radio receiver for the time period programmed by your installer. The fault clears once the RF device in question successfully transmits to the RF radio receiver.

Press the [5] key until two beeps sound. This displays the RF detection device reporting the RF sensor missing fault.

6 Communication Fail

A communication fail registers when the control panel fails to communicate with the receiving party (such as a monitoring company, mobile phone). The communication fault clears once the control panel successfully reports to the receiving party.

A communication fail also registers when network module is disconnected or tampered.

To determine which receiver or module failed to communicate, press the [6] key.

7 Input / Output Modules and Codepad Fail

The output fault registers when the output expander B308 is disconnected or tampered.

The codepad fault registers when any codepad is tampered or disconnected from the control panel.

The input fault registers when the input module B228 is disconnected or tampered.

To determine which fault occurred, press the [7] key.

8 Keyfob Low Battery

This fault occurs when any of the RF keyfobs report a low battery condition to the control panel. To determine which keyfob failed, press the [8] key. Only keyfob 1 to 16 faults display on the codepad through zone indicator 1 to 16.

9 Door and Power Supply Module Fail

The power supply module fault registers when the B520 power supply module is disconnected or tampered, or the power supply module battery 1 or 2 is disconnected.

The door fault registers when the B901 door controller is disconnected.

To determine which fault occurred, press the [9] key.

4.13

Inquire Cloud Status

1. Enter the Installer Code or Master Code, followed by [1][2][3] and the [#] key.
2. Cloud status displays on codepad indicator LED1 or LED2 corresponding to communicator 1 or 2.
 - Steady on - cloud online
 - Flash - cloud offline
3. Press the [#] key to exit.

4.14

RF Diagnose

These commands are used to check the RF zone / keyfob / repeater strength via IUI-SOL-ICON codepad.

Diagnose RF devices (wireless zones)

1. Enter the Installer Code or Master Code, followed by [1][4][1] and the [#] key.
2. Enter the device number (1 to 32) you want to check the RF strength, followed by the [*] key.
3. Codepad zone indicator status indicates the signal strength level.
 - on - strong signal, closer to 16 zone indicators indicates a stronger signal

- flashing - weak signal
- 4. Press the [#] key to exit.

Diagnose RF keyfobs

1. Enter the Installer Code or Master Code, followed by [1][4][2] and the [#] key.
2. Enter the keyfob number (1 to 64) you want to check the RF strength, followed by the [*] key. Up to 21 keyfobs on WE800EV2 or 64 keyfobs on RADION B810 can be checked, but only the current keyfob number (1 to 16) displays through zone indicators on the ICON codepad.
3. Codepad zone indicator status indicates the signal strength level.
 - on - strong signal, closer to 16 zone indicators indicates a stronger signal
 - flashing - weak signal
4. Press the [#] key to exit.

Diagnose RF repeaters

1. Enter the Installer Code or Master Code, followed by [1][4][3] and the [#] key.
2. Enter the point ID of RADION Repeater (1 to 8) you want to check the RF strength, followed by the [*] key.
3. Codepad zone indicator status indicates the signal strength level.
 - on - strong signal, closer to 16 zone indicators indicates a stronger signal
 - flashing - weak signal
4. Press the [#] key to exit.

5 Programming Parameters

5.1 Communication Programming

5.1.1 Receiver 1

Item	Location	Option	Default	New
Phone Number 1	0000 - 0015	15 = Telephone termination	15	
Phone Number 2	0016 - 0031	15 = Telephone termination	15	
Transmission Format	0033	0 = Not used 1 = Contact ID 4 = Domestic 5 = Conettix IP 6 = SIA Fast 7 = SIA Slow 8 = CSVIP 9 = Email	1	
Subscriber ID Number	0034 - 0039		0	
IP + Port / Email	1000 - 1099			
CSVIP User Name and Password	1100 - 1163			
Conettix Anti-replay	1400	1 = Anti-replay for Receiver 1 Enable 2 = Anti-replay for Receiver 2 Enable 4 = Anti-replay for Receiver 3 Enable 8 = Anti-replay for Receiver 4 Enable	15	
Conettix ACK Wait Time	1401 – 1402	0 – 99 = 0 – 99 sec.	5	
Conettix Heart Beat Time	1403 – 1404	1 – 99 = 1 – 99 min.	1	

5.1.2 Receiver 2

Item	Location	Option	Default	New
Phone Number 1	0040 - 0055	15 = Telephone termination	15	
Phone Number 2	0056 - 0071	15 = Telephone termination	15	
Transmission Format	0073	0 = Not used 1 = Contact ID 4 = Domestic 5 = Conettix IP 6 = SIA Fast 7 = SIA Slow 8 = CSVIP 9 = Email	1	
Subscriber ID Number	0074 - 0079		0	
IP + Port / Email	1200 - 1299			

Item	Location	Option	Default	New
CSVIP User Name and Password	1300 - 1363			
Conettix Anti-replay	1400	1 = Anti-replay for Receiver 1 Enable 2 = Anti-replay for Receiver 2 Enable 4 = Anti-replay for Receiver 3 Enable 8 = Anti-replay for Receiver 4 Enable	15	
Conettix ACK Wait Time	1405 – 1406	0 – 99 = 0 – 99 sec.	5	
Conettix Heart Beat Time	1407 – 1408	1 – 99 = 1 – 99 min.	1	

5.1.3 Receiver 3

Item	Location	Option	Default	New
Phone Number 1	1417 - 1432	15 = Telephone termination	15	
Phone Number 2	1433 - 1448	15 = Telephone termination	15	
Transmission Format	1450	0 = Not used 1 = Contact ID 4 = Domestic 5 = Conettix IP 6 = SIA Fast 7 = SIA Slow 8 = CSVIP 9 = Email	1	
Subscriber ID Number	1451 - 1456		0	
IP + Port / Email	2060 - 2159			
CSVIP User Name and Password	2160 - 2223			
Conettix Anti-replay	1400	1 = Anti-replay for Receiver 1 Enable 2 = Anti-replay for Receiver 2 Enable 4 = Anti-replay for Receiver 3 Enable 8 = Anti-replay for Receiver 4 Enable	15	
Conettix ACK Wait Time	1409 – 1410	0 – 99 = 0 – 99 sec.	5	
Conettix Heart Beat Time	1411 – 1412	1 – 99 = 1 – 99 min.	1	

5.1.4 Receiver 4

Item	Location	Option	Default	New
Phone Number 1	1457 - 1472	15 = Telephone termination	15	
Phone Number 2	1473 - 1488	15 = Telephone termination	15	
Transmission Format	1490	0 = Not used 1 = Contact ID 4 = Domestic 5 = Conettix IP	1	

Item	Location	Option	Default	New
		6 = SIA Fast 7 = SIA Slow 8 = CSVIP 9 = Email		
Subscriber ID Number	1491 - 1496		0	
IP + Port / Email	2260 - 2359			
CSVIP User Name and Password	2360 - 2423			
Conettix Anti-replay	1400	1 = Anti-replay for Receiver 1 Enable 2 = Anti-replay for Receiver 2 Enable 4 = Anti-replay for Receiver 3 Enable 8 = Anti-replay for Receiver 4 Enable	15	
Conettix ACK Wait Time	1413 - 1414	0 - 99 = 0 - 99 sec.	5	
Conettix Heart Beat Time	1415 - 1416	1 - 99 = 1 - 99 min.	1	

**Notice!**

Recommend to use A-Link Plus Software or Alphanumeric codepad IUI-SOL-TEXT to enter IP items.
Or enter IP items via ASCII Character Codes with ICON codepad IUI-SOL-ICON .

Program IP items with A-Link Plus Software or Alphanumeric codepad

1. Select **Comm** -> **Receiver Config** -> **Transmit Format**, select **CSVIP** for Receiver 1, 2, 3 or 4.
2. Select **Comm** -> **Receiver Config** -> **Subscriber ID Number**, enter Subscriber ID Number.
3. Select **Comm** -> **Network Config** , select module 1 or 2 as **Use, do not configure**.
4. Select **Comm** -> **Receiver Config** -> **IP + Port / Email**, enter IP and the Port, for example, **192.168.226.17:12000**.
5. Select **Comm** -> **Receiver Config** -> **CSVIP User Name And Password**, enter CSVIP User Name and Password:
 - Both user name and password, enter as user name with comma and password with comma, for example, **USER 1, 2580,**.
 - Only user name, enter as user name with two commas, for example, **USER 1,,**.
 - Only password, enter as comma, followed by password with comma, for example, **, 2580,**.
 - No user name and password, only enter two commas.

For A-Link Plus, enter up to 32 case sensitive alphanumeric characters for CSVIP User Name and Password directly through keyboard.

For Alphanumeric codepad, refer to *Programming Text*, page 11 to enter sensitive alphanumeric characters.

Program Email with A-Link Plus Software**Notice!**

For the network module B426, **Panel Programming Enable** shall be defaulted **Yes** in the Maintenance Page of the web-based configuration menus.

**Notice!**

When A- Link Plus is used to configure the network module, network module parameters will be replaced by parameters configured in A - Link Plus.

Network module parameters, such as IP address and port, must be entered into A-Link Plus as exactly as they are in the module; Web Access Enable must be reset as Enable in A-Link Plus if access to network module via the web interface is still needed.

1. Select **Comm -> Receiver Config -> Transmit Format**, select **Email**.
2. Select **Comm -> Receiver Config -> Subscriber ID Number**, enter Email title with consist of 6 numbers.
3. Select **Comm -> Network Config**, select module 1 or 2 as **Use and configure** or **Used, B4xx-M**.
4. Select **Comm -> Receiver Config -> IP + Port / Email**, enter email address of the recipient.
5. Select **Network module programming -> Module 1 (or 2) -> Mail Information**, enter email information. Take the sender as test @ 163.com for example, :
 - Partial mail server name / url : smtp.163.com
 - Mail server port: 465
 - Partial mail server user name: test @ 163.com
 - Mail server password: (enter current password)
 - Security options: Encrypted

5.1.5 External Network Module

Item	Location	Option	Default	New
External Network Module 1	0081	0 = Not used	0	
External Network Module 2	0082	1 = Use, do not configure 2 = Use and configure 3 = Used, B4xx-M	0	

5.1.6 IPv6 Setting

Item	Location	Option	Default	New
Network Module 1 IPv6 Mode	4020 - 4021	[4020] 0, [4021] 0 = Disable [4020] 0, [4021] 1 = Enable	01	

Item	Location	Option	Default	New
Network Module 2 IPv6 Mode	7020 - 7021	[7020] 0, [7021] 0 = Disable [7020] 0, [7021] 1 = Enable	00	

5.1.7 IP Address Settings

Network Module 1

Item	Location	Option	Default	New
Module's IPv4 Static Address	4022 - 4029		0, 0, 0, 0, 0, 0, 0, 0	
IPv4 Subnet Mask	4030 - 4037		15, 15, 15, 15, 15, 15, 0, 0	
IPv4 Default Gateway	4038 - 4045		0, 0, 0, 0, 0, 0, 0, 0	

Network Module 2

Item	Location	Option	Default	New
Module's IPv4 Static Address	7022 - 7029		0, 0, 0, 0, 0, 0, 0, 0	
IPv4 Subnet Mask	7030 - 7037		15, 15, 15, 15, 15, 15, 0, 0	
IPv4 Default Gateway	7038 - 7045		0, 0, 0, 0, 0, 0, 0, 0	

**Notice!**

Program IP address with hex numbers.

For example, for IP address 192.168.1.1 (Hex: C0.A8.01.01), program Location 4022 - 4029 as:

4022 = 12

4023 = 0

4024 = 10

4025 = 8

4026 = 0

4027 = 1

4028 = 0

4029 = 1

**Notice!**

With the TEXT LCD codepad, you can check the IP address via the Installer Menu [1][2][4] IP Address.

5.1.8 Network Module Cloud Connection

Item	Location	Option	Default	New
Module 1 Cloud Connection	4456	0 = Disable 4 = Enable	0	
Module 2 Cloud Connection	7456		0	

5.1.9 Password for A-Link Plus/RSC Connection

Item	Location	Option	Default	New
Password for A-Link Plus/RSC Connection	0083 - 0092		0	

5.1.10 DTMF Timing Compensation

Item	Location	Option	Default	New
DTMF Timing Compensation	0111	0 = Disable 1 – 9 = Timing compensation	0	

5.1.11 Country Codes

Item	Location	Option	Default	New
Country codes	0112	0 = Australia & New Zealand 1 = China	0	

5.1.12 Telco Arming Sequence (Call Forward On)

Item	Location	Option	Default	New
Telco Arming Sequence (Call Forward On)	0113 - 0142	15 = Telephone termination	15	

5.1.13 Telco Disarm Sequence (Call Forward Off)

Item	Location	Option	Default	New
Telco Disarm Sequence (Call Forward Off)	0143 - 0158	15 = Telephone termination	15	

5.1.14 Call Back Telephone Number

Item	Location	Option	Default	New
Call Back Telephone Number	0159 - 0174	15 = Telephone termination	15	

5.1.15 Ring Count

Item	Location	Option	Default	New
Ring Count	0175	0 = Panel does not answer 1 - 13 = Number of rings until panel answers 14 = Answering machine bypass 2 15 = Answering machine bypass 1	8	

5.1.16 Telephone Line Fail Options

Item	Location	Option	Default	New
Telephone Line Fail Options	0176	1 = Display FAULT Indicator when telephone line fails 2 = Sound alarm when system is armed 4 = Sound alarm when system is disarmed 8 = Reserved	0	

**Notice!**

Option 2 and 4 must be used in conjunction with Option 1 (for example, program 1,3,5, or 7).

5.1.17 Communication Options 1

Item	Location	Option	Default	New
Communication Options 1	0177	1 = Reporting functions allowed 2 = Remote arming by telephone allowed 4 = Answering machine bypass only when armed 8 = Use Bell 103 for FSK format (Disabled = CCITT V21)	9	

5.1.18 Communication Options 2

Item	Location	Option	Default	New
Communication Options 2	0178	1 = Arm/Disarm Reports only if alarmed 2 = STAY Mode Arm/Disarm Reports Enable 4 = Delay siren until transmission complete 8 = Extend handshake wait time from 30 to 60 sec.	0	

5.1.19 Communication Options 3

Item	Location	Option	Default	New
Communication Options 3	0179	1 = Set DTMF dialing pluses to 1 digit/sec 2 = Lockout telephone line fail alarm 4 = Reserved 8 = Reserved	2	

5.1.20 A-Link Plus Options

Item	Location	Option	Default	New
A-Link Plus Options	0180	1 = Enable upload/download using A-Link 2 = Enable A-Link callback 4 = Terminate A-Link connection on alarm 8 = Reserved	3	

5.2 Installer Code

Item	Location	Option	Default	New
Installer Code	0181		1	
	0182		2	
	0183		3	
	0184		4	

5.3 User Code Programming (User 1–32)

Item	Location	Default	New	Authority Level Location	Default	New
User #01	0185 0186 0187 0188	2 5 8 0		0189	10	
User #02	0190 - 0193	15		0194	2	
User #03	0195 - 0198	15		0199	2	
User #04	0200 - 0203	15		0204	2	
User #05	0205 - 0208	15		0209	2	
User #06	0210 - 0213	15		0214	2	
User #07	0215 - 0218	15		0219	2	
User #08	0220 - 0223	15		0224	2	
User #09	0225 - 0228	15		0229	2	
User #10	0230 - 0233	15		0234	2	
User #11	0235 - 0238	15		0239	2	
User #12	0240 - 0243	15		0244	2	
User #13	0245 - 0248	15		0249	2	
User #14	0250 - 0253	15		0254	2	
User #15	0255 - 0258	15		0259	2	
User #16	0260 - 0263	15		0264	2	
User #17	0566 - 0569	15		0570	2	
User #18	0571 - 0574	15		0575	2	
User #19	0576 - 0579	15		0580	2	
User #20	0581 - 0584	15		0585	2	
User #21	0586 - 0589	15		0590	2	
User #22	0591 - 0594	15		0595	2	
User #23	0596 - 0599	15		0600	2	
User #24	0601 - 0604	15		0605	2	
User #25	0606 - 0609	15		0610	2	
User #26	0611 - 0614	15		0615	2	
User #27	0616 - 0619	15		0620	2	
User #28	0621 - 0624	15		0625	2	
User #29	0626 - 0629	15		0630	2	

Item	Location	Default	New	Authority Level Location	Default	New
User #30	0631 - 0634	15		0635	2	
User #31	0636 - 0639	15		0640	2	
User #32	0641 - 0644	15		0645	2	

Authority Levels	Description
0	Arm/Disarm
1	Arm Only
2	Arm/Disarm and Arm/Disarm Reports
3	Arm Only and Arm Reports
4	Arm/Disarm and Code Required to Isolate
6	Arm/Disarm and Arm/Disarm Reports and Code Required to Isolate
8	Master Code and Arm/Disarm
10	Master Code and Arm/Disarm and Arm/Disarm Reports
12	Master Code and Arm/Disarm and Code Required to Isolate
14	Master Code and Arm/Disarm and Code Required to Isolate and Arm/Disarm Reports

Table 5.13: Authority Levels

- Arm/Disarm includes Cycle / Lock / Unlock.
- Master Code includes Cycle / Lock / Unlock / Secure / Unsecure, and Schedule.

5.4 User Code Programming (User 33–64)

Item	Location	Default	New	Authority Level Location	Default	New
User #33	10154 - 10157	15		10158	2	
User #34	10159 - 10162	15		10163	2	
User #35	10164 - 10167	15		10168	2	
User #36	10169 - 10172	15		10173	2	
User #37	10174 - 10177	15		10178	2	
User #38	10179 - 10182	15		10183	2	
User #39	10184 - 10187	15		10188	2	
User #40	10189 - 10192	15		10193	2	
User #41	10194 - 10197	15		10198	2	
User #42	10199 - 10202	15		10203	2	
User #43	10204 - 10207	15		10208	2	
User #44	10209 - 10212	15		10213	2	
User #45	10214 - 10217	15		10218	2	

Item	Location	Default	New	Authority Level Location	Default	New
User #46	10219 - 10222	15		10223	2	
User #47	10224 - 10227	15		10228	2	
User #48	10229 - 10232	15		10233	2	
User #49	10234 - 10237	15		10238	2	
User #50	10239 - 10242	15		10243	2	
User #51	10244 - 10247	15		10248	2	
User #52	10249 - 10252	15		10253	2	
User #53	10254 - 10257	15		10258	2	
User #54	10259 - 10262	15		10263	2	
User #55	10264 - 10267	15		10268	2	
User #56	10269 - 10272	15		10273	2	
User #57	10274 - 10277	15		10278	2	
User #58	10279 - 10282	15		10283	2	
User #59	10284 - 10287	15		10288	2	
User #60	10289 - 10292	15		10293	2	
User #61	10294 - 10297	15		10298	2	
User #62	10299 - 10302	15		10303	2	
User #63	10304 - 10307	15		10308	2	
User #64	10309 10310 - 10312	0 15		10313	3	

5.5 Day Alarm Zones

Item	Location	Option	Default	New
Day Alarm Zones	0265	1 = Zone 1 2 = Zone 2 4 = Zone 3 8 = Zone 4	0	

5.6 EOL Resistor Value

Item	Location	Option	Default	New
EOL Resistor Value	0266	0 = No EOL 1 = 1k 2 = 1k5 3 = 2k2 4 = 3k3 5 = 3k9 6 = 4k7 8 = 6k8 9 = 10k 10 = 12k 11 = 22k 12 = Normal open 13 = Reserved	15	

Item	Location	Option		Default	New
		7 = 5k6	14 = Split EOL (3k3/6k8 with tamper 1k) 15 = Split EOL (3k3/6k8)		

5.7 B228 EOL Resistor Value

Item	Location	Option		Default	New
EOL Resistor Value	0389	0 = No EOL 1 = 1k 2 = 1k5 3 = 2k2 4 = 3k3 5 = 3k9 6 = 4k7 7 = 5k6	8 = 6k8 9 = 10k 10 = 12k 11 = 22k 12 = Normal open 13 = Reserved 14 = Split EOL (3k3/6k8 with tamper 1k) 15 = Split EOL (3k3/6k8)	0	

5.8 Zone Programming (Zone 1–16)

Item	Location	Default	New	Item	Location	Default	New
Zone #01				Zone #02			
Zone Type	0267	2		Zone Type	0274	1	
Zone Pulse Count	0268	0		Zone Pulse Count	0275	0	
Zone Pulse Count Time	0269	0		Zone Pulse Count Time	0276	0	
Zone Options 1	0270	1		Zone Options 1	0277	1	
Zone Options 2	0271	14		Zone Options 2	0278	14	
Zone Invert	0272	0		Zone Invert	0279	0	
Zone Report Options	0273	1		Zone Report Options	0280	1	
Zone #03				Zone #04			
Zone Type	0281	1		Zone Type	0288	1	
Zone Pulse Count	0282	0		Zone Pulse Count	0289	0	
Zone Pulse Count Time	0283	0		Zone Pulse Count Time	0290	0	
Zone Options 1	0284	1		Zone Options 1	0291	1	
Zone Options 2	0285	14		Zone Options 2	0292	14	
Zone Invert	0286	0		Zone Invert	0293	0	
Zone Report Options	0287	1		Zone Report Options	0294	1	
Zone #05				Zone #06			
Zone Type	0295	0		Zone Type	0302	0	

Item	Location	Default	New	Item	Location	Default	New
Zone Pulse Count	0296	0		Zone Pulse Count	0303	0	
Zone Pulse Count Time	0297	0		Zone Pulse Count Time	0304	0	
Zone Options 1	0298	1		Zone Options 1	0305	1	
Zone Options 2	0299	14		Zone Options 2	0306	14	
Zone Invert	0300	0		Zone Invert	0307	0	
Zone Report Options	0301	1		Zone Report Options	0308	1	
Zone #07				Zone #08			
Zone Type	0309	0		Zone Type	0316	0	
Zone Pulse Count	0310	0		Zone Pulse Count	0317	0	
Zone Pulse Count Time	0311	0		Zone Pulse Count Time	0318	0	
Zone Options 1	0312	1		Zone Options 1	0319	1	
Zone Options 2	0313	14		Zone Options 2	0320	14	
Zone Invert	0314	0		Zone Invert	0321	0	
Zone Report Options	0315	1		Zone Report Options	0322	1	
Zone #09				Zone #10			
Zone Type	0323	15		Zone Type	0330	15	
Zone Pulse Count	0324	0		Zone Pulse Count	0331	0	
Zone Pulse Count Time	0325	0		Zone Pulse Count Time	0332	0	
Zone Options 1	0326	1		Zone Options 1	0333	1	
Zone Options 2	0327	14		Zone Options 2	0334	14	
Zone Invert	0328	0		Zone Invert	0335	0	
Zone Report Options	0329	1		Zone Report Options	0336	1	
Zone #11				Zone #12			
Zone Type	0337	15		Zone Type	0344	15	
Zone Pulse Count	0338	0		Zone Pulse Count	0345	0	
Zone Pulse Count Time	0339	0		Zone Pulse Count Time	0346	0	
Zone Options 1	0340	1		Zone Options 1	0347	1	
Zone Options 2	0341	14		Zone Options 2	0348	14	
Zone Invert	0342	0		Zone Invert	0349	0	
Zone Report Options	0343	1		Zone Report Options	0350	1	
Zone #13				Zone #14			
Zone Type	0351	15		Zone Type	0358	15	
Zone Pulse Count	0352	0		Zone Pulse Count	0359	0	

Item	Location	Default	New	Item	Location	Default	New
Zone Pulse Count Time	0353	0		Zone Pulse Count Time	0360	0	
Zone Options 1	0354	1		Zone Options 1	0361	1	
Zone Options 2	0355	14		Zone Options 2	0362	14	
Zone Invert	0356	0		Zone Invert	0363	0	
Zone Report Options	0357	1		Zone Report Options	0364	1	
Zone #15				Zone #16			
Zone Type	0365	15		Zone Type	0372	15	
Zone Pulse Count	0366	0		Zone Pulse Count	0373	0	
Zone Pulse Count Time	0367	0		Zone Pulse Count Time	0374	0	
Zone Options 1	0368	1		Zone Options 1	0375	1	
Zone Options 2	0369	14		Zone Options 2	0376	14	
Zone Invert	0370	0		Zone Invert	0377	0	
Zone Report Options	0371	1		Zone Report Options	0378	1	

Item	Location	Default	New	Item	Location	Default	New
Zone 1 Source	0754	0		Zone 2 Source	0755	0	
Zone 3 Source	0756	0		Zone 4 Source	0757	0	
Zone 5 Source	0758	0		Zone 6 Source	0759	0	
Zone 7 Source	0760	0		Zone 8 Source	0761	0	
Zone 9 Source	0762	0		Zone 10 Source	0763	0	
Zone 11 Source	0764	0		Zone 12 Source	0765	0	
Zone 13 Source	0766	0		Zone 14 Source	0767	0	
Zone 15 Source	0768	0		Zone 16 Source	0769	0	

Item	Option	
Zone Type	0 = Instant 1 = Handover 2 = Delay-1 3 = Delay-2 4 = Reserved 5 = Reserved 6 = 24-Hour Medical 7 = 24-Hour Panic	8 = 24-Hour Hold-up 9 = 24-Hour Tamper 10 = Reserved 11 = Keyswitch 12 = 24-Hour Burglary 13 = 24-Hour Fire 14 = Chime Only 15 = Not used
Zone Pulse Count	Use the pulse count to program how many pulses (0 to 15) need to be registered within the pulse count time to activate an alarm.	
Zone Pulse Count Time	20 ms Loop Response Time	150 ms Loop Response Time
	0 = 0.5 sec. 1 = 1 sec.	8 = 20 sec. 9 = 30 sec.

Item	Option	
	2 = 2 sec. 3 = 3 sec. 4 = 4 sec. 5 = 5 sec. 6 = 10 sec. 7 = 15 sec.	10 = 40 sec. 11 = 50 sec. 12 = 60 sec. 13 = 90 sec. 14 = 120 sec. 15 = 200 sec.
Zone Options 1	1 = Lockout siren/report 2 = Delay alarm report 4 = Silent alarm 8 = Sensor watch	
Zone Options 2	1 = Isolated in STAY Mode 1 2 = Zone isolation allowed 4 = Forced arming allowed 8 = Zone Restore Report allowed	
Zone Invert	0 = Disable 1 = Enable	
Zone Report Options	0 = No zone reports allowed 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	
Keyswitch Zone Options	0 = Latching arm and disarm in AWAY Mode 1 = Latching arm in AWAY Mode 2 = Latching disarm from AWAY Mode or STAY Mode 4 = Latching arm and disarm in STAY Mode 1 5 = Latching arm in STAY Mode 1 6 = Latching disarm from STAY Mode 8 = Momentary arm and disarm in AWAY Mode 9 = Momentary arm in AWAY Mode 10 = Momentary disarm from AWAY Mode or STAY Mode 12 = Momentary arm and disarm in STAY Mode 1 13 = Momentary arm in STAY Mode 1 14 = Momentary disarm from STAY Mode	
Zone Source	0 = Onboard 1 = RF 2 = B228	

Table 5.14: Zone Item Options

The keyswitch zone options replace Zone Options 1 only for the zones that were programmed to operate as a keyswitch zone.

5.9 Zone Programming (Zone 17–32)

Item	Location	Default	New	Item	Location	Default	New
Zone #17				Zone #18			
Zone Type	9934	15		Zone Type	9941	15	
Zone Pulse Count	9935	0		Zone Pulse Count	9942	0	
Zone Pulse Count Time	9936	0		Zone Pulse Count Time	9943	0	
Zone Options 1	9937	1		Zone Options 1	9944	1	
Zone Options 2	9938	14		Zone Options 2	9946	14	
Zone Invert	9939	0		Zone Invert	9946	0	
Zone Report Options	9940	1		Zone Report Options	9947	1	
Zone #19				Zone #20			
Zone Type	9948	15		Zone Type	9955	15	
Zone Pulse Count	9949	0		Zone Pulse Count	9956	0	
Zone Pulse Count Time	9950	0		Zone Pulse Count Time	9957	0	
Zone Options 1	9951	1		Zone Options 1	9958	1	
Zone Options 2	9952	14		Zone Options 2	9959	14	
Zone Invert	9953	0		Zone Invert	9960	0	
Zone Report Options	9954	1		Zone Report Options	9961	1	
Zone #21				Zone #22			
Zone Type	9962	15		Zone Type	9969	15	
Zone Pulse Count	9963	0		Zone Pulse Count	9970	0	
Zone Pulse Count Time	9964	0		Zone Pulse Count Time	9971	0	
Zone Options 1	9965	1		Zone Options 1	9972	1	
Zone Options 2	9966	14		Zone Options 2	9973	14	
Zone Invert	9967	0		Zone Invert	9974	0	
Zone Report Options	9968	1		Zone Report Options	9975	1	
Zone #23				Zone #24			
Zone Type	9976	15		Zone Type	9983	15	
Zone Pulse Count	9977	0		Zone Pulse Count	9984	0	
Zone Pulse Count Time	9978	0		Zone Pulse Count Time	9985	0	
Zone Options 1	9979	1		Zone Options 1	9986	1	
Zone Options 2	9980	14		Zone Options 2	9987	14	
Zone Invert	9981	0		Zone Invert	9988	0	

Item	Location	Default	New	Item	Location	Default	New
Zone Report Options	9982	1		Zone Report Options	9989	1	
Zone #25				Zone #26			
Zone Type	9990	15		Zone Type	9997	15	
Zone Pulse Count	9991	0		Zone Pulse Count	9998	0	
Zone Pulse Count Time	9992	0		Zone Pulse Count Time	9999	0	
Zone Options 1	9993	1		Zone Options 1	10000	1	
Zone Options 2	9994	14		Zone Options 2	10001	14	
Zone Invert	9995	0		Zone Invert	10002	0	
Zone Report Options	9996	1		Zone Report Options	10003	1	
Zone #27				Zone #28			
Zone Type	10004	15		Zone Type	10011	15	
Zone Pulse Count	10005	0		Zone Pulse Count	10012	0	
Zone Pulse Count Time	10006	0		Zone Pulse Count Time	10013	0	
Zone Options 1	10007	1		Zone Options 1	10014	1	
Zone Options 2	10008	14		Zone Options 2	10015	14	
Zone Invert	10009	0		Zone Invert	10016	0	
Zone Report Options	10010	1		Zone Report Options	10017	1	
Zone #29				Zone #30			
Zone Type	10018	15		Zone Type	10025	15	
Zone Pulse Count	10019	0		Zone Pulse Count	10026	0	
Zone Pulse Count Time	10020	0		Zone Pulse Count Time	10027	0	
Zone Options 1	10021	1		Zone Options 1	10028	1	
Zone Options 2	10022	14		Zone Options 2	10029	14	
Zone Invert	10023	0		Zone Invert	10030	0	
Zone Report Options	10024	1		Zone Report Options	10031	1	
Zone #31				Zone #32			
Zone Type	10032	15		Zone Type	10039	15	
Zone Pulse Count	10033	0		Zone Pulse Count	10040	0	
Zone Pulse Count Time	10034	0		Zone Pulse Count Time	10041	0	
Zone Options 1	10035	1		Zone Options 1	10042	1	
Zone Options 2	10036	14		Zone Options 2	10043	14	
Zone Invert	10037	0		Zone Invert	10044	0	
Zone Report Options	10038	1		Zone Report Options	10045	1	

Item	Location	Default	New	Item	Location	Default	New
Zone 17 Source	10062	2		Zone 18 Source	10063	2	
Zone 19 Source	10064	2		Zone 20 Source	10065	2	
Zone 21 Source	10066	2		Zone 22 Source	10067	2	
Zone 23 Source	10068	2		Zone 24 Source	10069	2	
Zone 25 Source	10070	2		Zone 26 Source	10071	2	
Zone 27 Source	10072	2		Zone 28 Source	10073	2	
Zone 29 Source	10074	2		Zone 30 Source	10075	2	
Zone 31 Source	10076	2		Zone 32 Source	10077	2	

5.10 Door Associated Zone Programming (Zone 129–132)

Item	Location	Default	New	Item	Location	Default	New
Zone #129 (Door 1 zone)				Zone #130 (Door 2 zone)			
Zone Type	13252	0		Zone Type	13259	0	
Zone Pulse Count	13253	0		Zone Pulse Count	13260	0	
Zone Pulse Count Time	13254	0		Zone Pulse Count Time	13261	0	
Zone Options 1	13255	1		Zone Options 1	13262	1	
Zone Options 2	13256	14		Zone Options 2	13263	14	
Reserved	13257			Reserved	13264		
Zone Report Options	13258	1		Zone Report Options	13265	1	
Zone #131 (Door 3 zone)				Zone #132 (Door 4 zone)			
Zone Type	13266	0		Zone Type	13273	0	
Zone Pulse Count	13267	0		Zone Pulse Count	13274	0	
Zone Pulse Count Time	13268	0		Zone Pulse Count Time	13275	0	
Zone Options 1	13269	1		Zone Options 1	13276	1	
Zone Options 2	13270	14		Zone Options 2	13277	14	
Reserved	13271			Reserved	13278		
Zone Report Options	13272	1		Zone Report Options	13279	1	

5.11 Swinger Programming

5.11.1 Swinger Shutdown Count For Siren

Item	Location	Option	Default	New
Swinger Shutdown Count For Siren	0379	1 – 15 = Number of times siren operates until lockout	3	

5.11.2 Swinger Shutdown Count For Report

Item	Location	Option	Default	New
Swinger Shutdown Count For Report	0380	1 – 15 = Number of times report operates until lockout	6	

5.12 Zone Status Programming

5.12.1 STAY Mode 2 Automatically Bypass Zones

Item	Location	Option		Default	New
STAY Mode 2 Automatically Bypass Zones	0381	1 = Zone 1 2 = Zone 2	4 = Zone 3 8 = Zone 4	0	
	0382	1 = Zone 5 2 = Zone 6	4 = Zone 7 8 = Zone 8	0	
	0383	1 = Zone 9 2 = Zone 10	4 = Zone 11 8 = Zone 12	0	
	0384	1 = Zone 13 2 = Zone 14	4 = Zone 15 8 = Zone 16	0	
	0385	1 = Zone 17 2 = Zone 18	4 = Zone 19 8 = Zone 20	0	
	0386	1 = Zone 21 2 = Zone 22	4 = Zone 23 8 = Zone 24	0	
	0387	1 = Zone 25 2 = Zone 26	4 = Zone 27 8 = Zone 28	0	
	0388	1 = Zone 29 2 = Zone 30	4 = Zone 31 8 = Zone 32	0	
	13280	1 = Zone 129 2 = Zone 130	4 = Zone 131 8 = Zone 132	0	

5.12.2 Zone Status Reporting Options

Item	Location	Option	Default	New
Zone Status Reporting Options	0392	0 = No Zone status reports allowed 1 = Report to Receiver 1 2 = Report to Receiver 2	1	

Item	Location	Option	Default	New
		3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)		

5.13 RF Programming

5.13.1 RF Supervision Time

Item	Location	Option	Default	New
RF Supervision Time	0393	0 = Disable 2 = 2 hours 3 = 4 hours 4 = 12 hours 5 = 24 hours 6 = 48 hours 7 = 72 hours	4	

5.13.2 RADION Anti-Jamming Sensitivity

Item	Location	Option	Default	New
RADION Anti-Jamming Sensitivity	0394	0 = Disable 15 = Most Sensitive	12	

5.13.3 RF Receiver

Item	Location	Option	Default	New
RF Receiver	0395	0 = Not used 1 = Use RADION receiver B810 2 = Use WE800EV2	0	

5.13.4 RF Options

Item	Location	Option	Default	New
RF Options	0396	1 = Siren Sound On RF Receiver Fail 2 = RF Receiver Jam/Tamper Siren Alarm 4 = Unseal Zone That Fail Monitor	0	

5.14 Report Programming

5.14.1 Door Reporting Options

Item	Location	Option	Default	New
Door Reporting Options	0391	0 = No Door Reports allowed 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	1	

5.14.2 Arm / Disarm Reporting Options

Item	Location	Option	Default	New
Arm / Disarm Reporting Options	0403	0 = No Arm / Disarm Reports allowed 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	1	

5.14.3 Codepad Reporting Options

Item	Location	Option	Default	New
Codepad Reporting Options	0411	0 = No Codepad Alarm Reports allowed 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	1	

5.15 Service Mode Programming

Item	Location	Option	Default	New
Service mode expiration time	0405 - 0407	0 = Disable 1 - 998 = 1 - 998 minutes 999 = Never expired until Serve Mode command is operated	090	

Item	Location	Option	Default	New
Service mode report	0408	0 = Disable 1 = Enable	0	
Service mode alarm output	0409	0 = Disable 1 = Enable	0	
Service mode codepad buzzer	0410	0 = Disable 1 = Enable	0	

5.16 B520 Programming

Item	Location	Option	Default	New
B520 module 1	0412	0 = Disable	2	
B520 module 2	0413	1 = Module enable 2 = Tamper enable	2	
B520 module 3	0414	4 = Battery 2 enable	2	
B520 module 4	0415		2	

5.17 Daylight Saving Time Programming

Item	Location	Option	Default	New
Daylight Saving Time (DST) Option	0416	0 = No DST 1 = Australia 2 = New Zealand 3 = Customized DST	0	
Customize DST + 1 hour Month	0417	0 = No DST 1 to 12 = January to December	0	
Customize DST + 1 hour Day of Week (DOW) ordinal	0418	0 = No DST 1 = first 2 = second 3 = third 4 = fourth 5 = last	0	
Customize DST + 1 hour Day of Week (DOW)	0419	0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday	0	
Customize DST - 1 hour Month	0420	0 = No DST 1 to 12 = January to December	0	
Customize DST - 1 hour Day of Week (DOW) ordinal	0421	0 = No DST 1 = first 2 = second 3 = third	0	

Item	Location	Option	Default	New
		4 = fourth 5 = last		
Customize DST - 1 hour Day of Week (DOW)	0422	0 = Sunday 1 = Monday 2 = Tuesday 3 = Wednesday 4 = Thursday 5 = Friday 6 = Saturday	0	

5.18 System Status Programming

5.18.1 Access Denied(Code Retry)

Item	Location	Option	Default	New
Code retry limit	0424	0 = Unlimited 1 – 15 = Error code attempts	6	

5.18.2 System Status Reporting Options

Item	Location	Option	Default	New
System Status Reporting Options	0427	0 = No report required 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	1	

5.19 Test Report Programming

5.19.1 Test Report Time (Automatic)

Item	Location	Option	Default	New
Hour of day (tens digit)	0428		0	
Hour of day (units digit)	0429		0	
Minute of day (tens digit)	0430		0	
Minute of day (units digit)	0431		0	
Repeat interval in days	0434	0 = Disable 1 – 15 = 1 – 15 days	0	

5.19.2 Test Reporting Options

Item	Location	Option	Default	New
Test Reporting Options	0435	0 = No report required 1 = Report to Receiver 1 2 = Report to Receiver 2 3 = Report to Receiver 3 4 = Report to Receiver 4 5 = Report to Receiver 1,2,3,4 6 = Report to Receiver 1 (2,3,4 backup) 7 = Report to Receiver 1 (2 backup) and Receiver 3 (4 backup)	1	

5.20 Output Programming

Item	Location	Default	New	Item	Location	Default	New
Output 1 (Default = Horn Speaker)				Output 2 (Default = Siren Running)			
Event Code	0436	1		Event Code	0442	1	
Event Code	0437	14		Event Code	0443	15	
Polarity	0438	0		Polarity	0444	1	
Time Base	0439	0		Time Base	0445	0	
Time Base Multiplier	0440	0		Time Base Multiplier	0446	0	
Time Base Multiplier	0441	0		Time Base Multiplier	0447	0	
Output 3 (Default = Strobe - Reset After 8 hrs.)				Relay Output (Default = Radio Control Output 1)			
Event Code	0448	2		Event Code	0454	2	
Event Code	0449	0		Event Code	0455	11	
Polarity	0450	6		Polarity	0456	3	
Time Base	0451	4		Time Base	0457	2	
Time Base Multiplier	0452	0		Time Base Multiplier	0458	0	
Time Base Multiplier	0453	8		Time Base Multiplier	0459	2	
Codepad Buzzer (Default = Entry/Exit Warning and Day Alarm)							
Event Code	0460	0					
Event Code	0461	13					
Polarity	0462	2					
Time Base	0463	1					
Time Base Multiplier	0464	0					
Time Base Multiplier	0465	9					

Item	Location	Default	New	Item	Location	Default	New
B308 Output 1				B308 Output 2			
Event Code	0646	0		Event Code	0652	0	
Event Code	0647	0		Event Code	0653	0	
Polarity	0648	0		Polarity	0654	0	
Time Base	0649	0		Time Base	0655	0	
Time Base Multiplier	0650	0		Time Base Multiplier	0656	0	
Time Base Multiplier	0651	0		Time Base Multiplier	0657	0	
B308 Output 3				B308 Output 4			
Event Code	0658	0		Event Code	0664	0	
Event Code	0659	0		Event Code	0665	0	
Polarity	0660	0		Polarity	0666	0	
Time Base	0661	0		Time Base	0667	0	
Time Base Multiplier	0662	0		Time Base Multiplier	0668	0	
Time Base Multiplier	0663	0		Time Base Multiplier	0669	0	
B308 Output 5				B308 Output 6			
Event Code	0670	0		Event Code	0676	0	
Event Code	0671	0		Event Code	0677	0	
Polarity	0672	0		Polarity	0678	0	
Time Base	0673	0		Time Base	0679	0	
Time Base Multiplier	0674	0		Time Base Multiplier	0680	0	
Time Base Multiplier	0675	0		Time Base Multiplier	0681	0	
B308 Output 7				B308 Output 8			
Event Code	0682	0		Event Code	0688	0	
Event Code	0683	0		Event Code	0689	0	
Polarity	0684	0		Polarity	0690	0	
Time Base	0685	0		Time Base	0691	0	
Time Base Multiplier	0686	0		Time Base Multiplier	0692	0	
Time Base Multiplier	0687	0		Time Base Multiplier	0693	0	

Item	Location	Default	New	Item	Location	Default	New
B308 Output 9				B308 Output 10			
Event Code	0694	0		Event Code	0700	0	
Event Code	0695	0		Event Code	0701	0	
Polarity	0696	0		Polarity	0702	0	
Time Base	0697	0		Time Base	0703	0	
Time Base Multiplier	0698	0		Time Base Multiplier	0704	0	
Time Base Multiplier	0699	0		Time Base Multiplier	0705	0	
B308 Output 11				B308 Output 12			
Event Code	0706	0		Event Code	0712	0	
Event Code	0707	0		Event Code	0713	0	
Polarity	0708	0		Polarity	0714	0	
Time Base	0709	0		Time Base	0715	0	
Time Base Multiplier	0710	0		Time Base Multiplier	0716	0	
Time Base Multiplier	0711	0		Time Base Multiplier	0717	0	
B308 Output 13				B308 Output 14			
Event Code	0718	0		Event Code	0724	0	
Event Code	0719	0		Event Code	0725	0	
Polarity	0720	0		Polarity	0726	0	
Time Base	0721	0		Time Base	0727	0	
Time Base Multiplier	0722	0		Time Base Multiplier	0728	0	
Time Base Multiplier	0723	0		Time Base Multiplier	0729	0	
B308 Output 15				B308 Output 16			
Event Code	0730	0		Event Code	0736	0	
Event Code	0731	0		Event Code	0737	0	
Polarity	0732	0		Polarity	0738	0	
Time Base	0733	0		Time Base	0739	0	
Time Base Multiplier	0734	0		Time Base Multiplier	0740	0	
Time Base Multiplier	0735	0		Time Base Multiplier	0741	0	

Item	Location	Default	New	Item	Location	Default	New
B308 Output 17				B308 Output 18			
Event Code	10078	0		Event Code	10084	0	
Event Code	10079	0		Event Code	10085	0	
Polarity	10080	0		Polarity	10086	0	
Time Base	10081	0		Time Base	10087	0	
Time Base Multiplier	10082	0		Time Base Multiplier	10088	0	
Time Base Multiplier	10083	0		Time Base Multiplier	10089	0	
B308 Output 19				B308 Output 20			
Event Code	10090	0		Event Code	10096	0	
Event Code	10091	0		Event Code	10097	0	
Polarity	10092	0		Polarity	10098	0	
Time Base	10093	0		Time Base	10099	0	
Time Base Multiplier	10094	0		Time Base Multiplier	10100	0	
Time Base Multiplier	10095	0		Time Base Multiplier	10101	0	
B308 Output 21				B308 Output 22			
Event Code	10102	0		Event Code	10108	0	
Event Code	10103	0		Event Code	10109	0	
Polarity	10104	0		Polarity	10110	0	
Time Base	10105	0		Time Base	10111	0	
Time Base Multiplier	10106	0		Time Base Multiplier	10112	0	
Time Base Multiplier	10107	0		Time Base Multiplier	10113	0	
B308 Output 24				B308 Output 24			
Event Code	10114	0		Event Code	10120	0	
Event Code	10115	0		Event Code	10121	0	
Polarity	10116	0		Polarity	10122	0	
Time Base	10117	0		Time Base	10123	0	
Time Base Multiplier	10118	0		Time Base Multiplier	10124	0	
Time Base Multiplier	10119	0		Time Base Multiplier	10125	0	

Item	Option	
Event Code	0 0 = Reserved 0 1 = System armed 0 2 = System disarmed 0 3 = Armed in STAY mode 0 4 = Armed in AWAY mode 0 5 = Pre-arming alert 0 6 = Exit Warning (all zones sealed) and entry warning 0 7 = Exit Warning 0 8 = Exit Warning finished 0 9 = Kiss-off after end of Exit Time 0 10 = Reserved 0 11 = Entry warning 0 12 = Entry warning and day alarm resetting 0 13 = Exit warning and entry warning and day alarm resetting 0 14 = Day alarm resetting 0 15 = Day alarm latching	1 0 = Day alarm enabled 1 1 = Telephone line fail 1 2 = Kiss-off received 1 3 = AUX Power Supply fail 1 4 = AC fail 1 5 = Low battery 1 6 = Output 1 fail 1 7 = Sensor watch alarm 1 8 = Codepad medical alarm 1 9 = Codepad fire alarm 1 10 = Codepad panic alarm 1 11 = Codepad duress alarm 1 12 = Access denied (code retries) 1 13 = Reserved 1 14 = Horn speaker (output 1 only) 1 15 = Siren running
Event Code	2 0 = Strobe 2 1 = Silent alarm 2 2 = Alarm in STAY mode 2 3 = Alarm in AWAY mode 2 4 = System fault 2 5 = Fire alarm (resetting) 2 6 = Fire alarm (latching) 2 7 = Fire alarm (verification) 2 8 = Remote control 1 2 9 = Remote control 2 2 10 = Remote control 3 2 11 = Radio control output 1 2 12 = Radio control output 2 2 13 = Radio control output 1- not in AWAY Mode 2 14 = Radio control output 2- not in AWAY Mode 2 15 = Communications fail after 3 attempts	3 0 = Communications fail 3 1 = Report disabled 3 2 = Report active (on-line) 3 3 = Ring detect 3 4 = Codepad/Keyfob panic 3 5 = Mimic zone 1 3 6 = Mimic zone 2 3 7 = Mimic zone 3 3 8 = Mimic zone 4 3 9 = Mimic zone 5 3 10 = Mimic zone 6 3 11 = Mimic zone 7 3 12 = Mimic zone 8 3 13 = Mimic zone 9 3 14 = Mimic zone 10 3 15 = Mimic zone 11
Event Code	4 0 = Mimic zone 12 4 1 = Mimic zone 13 4 2 = Mimic zone 14 4 3 = Mimic zone 15 4 4 = Mimic zone 16 4 5 = Chime 4 6 = Zone not sealed 4 7 = Zone not sealed after Exit Time 4 8 = Reserved 4 9 = AC MAINS cycle (60 Hz or 50 Hz) 4 10 = Area 1 - zone unsealed	5 0 = Reserved 5 1 = Reserved 5 2 = Area 1 in alarm 5 3 = Area 2 in alarm 5 4 = Reserved 5 5 = Reserved 5 6 = Area 1 armed 5 7 = Area 2 armed 5 8 = Reserved 5 9 = Reserved 5 10 = Area 1 disarmed

Item	Option	
	4 11 = Area 2 - zone unsealed 4 12 = Reserved 4 13 = Reserved 4 14 = Reserved 4 15 = Reserved	5 11 = Area 2 disarmed 5 12 = Reserved 5 13 = Reserved 5 14 = Any areas armed 5 15 = Any areas disarmed
Event Code	6 0 = Reserved 6 1 = Reserved 6 2 = Remote control 4 6 3 = Remote control 5 6 4 = Remote control 6 6 5 = Remote control 7 6 6 = Remote control 8 6 7 = Remote control 9	6 8 = Remote control 10 6 9 = Remote control 11 6 10 = Remote control 12 6 11 = Remote control 13 6 12 = Remote control 14 6 13 = Remote control 15 6 14 = Remote control 16 6 15 = Remote control 17
Event Code	7 0 = Remote control 18 7 1 = Remote control 19 7 2 = Remote control 20 7 3 = Remote control 21 7 4 = Remote control 22 7 5 = Remote control 23 7 6 = Remote control 24 7 7 = Remote control 25 7 8 = Remote control 26	7 9 = Remote control 27 7 10 = Remote control 28 7 11 = Remote control 29 7 12 = Remote control 30 7 13 = Remote control 31 7 14 = Remote control 32 7 15 = Remote control 33 8 0 = Remote control 34
Polarity (Modes)	0 = Output not used 1 = Normally open, going low 2 = Normally open, pulsing low 3 = Normally open, one shot low 4 = Normally open, one shot low (reactivate) 5 = Normally open, one shot low (can reset) 6 = Normally open, one shot low (alarm) 7 = Normally open, latching low	8 = Normally low, going open 9 = Normally low, pulsing open 10 = Normally low, one shot open 11 = Normally low, one shot open (reactivate) 12 = Normally low, one shot open (can reset) 13 = Normally low, one shot open (alarm) 14 = Normally low, latching open
Time Base	0 = Reserved 1 = 200 ms 2 = 1 sec.	3 = 1 min. 4 = 1 hr.
Time Base Multiplier	Enter a value between 00 and 99.	

Table 5.15: Output Item Options

5.21 B228 output programming

Item	Location	Default	New	Item	Location	Default	New
B228 Module 1 Output 1				B228 Module 1 Output 2			
Event Code	0742	0		Event Code	0748	0	
Event Code	0743	0		Event Code	0749	0	

Item	Location	Default	New	Item	Location	Default	New
Polarity	0744	0		Polarity	0750	0	
Time Base	0745	0		Time Base	0751	0	
Time Base Multiplier	0746	0		Time Base Multiplier	0752	0	
Time Base Multiplier	0747	0		Time Base Multiplier	0753	0	
OC 1 Mode	0770	0		OC2 Mode	0771	0	
B228 Module 2 Output 1				B228 Module 2 Output 2			
Event Code	10126	0		Event Code	10133	0	
Event Code	10127	0		Event Code	10134	0	
Polarity	10128	0		Polarity	10135	0	
Time Base	10129	0		Time Base	10136	0	
Time Base Multiplier	10130	0		Time Base Multiplier	10137	0	
Time Base Multiplier	10131	0		Time Base Multiplier	10138	0	
OC 1 Mode	10132	0		OC2 Mode	10139	0	
B228 Module 3 Output 1				B228 Module 3 Output 2			
Event Code	10140	0		Event Code	10147	0	
Event Code	10141	0		Event Code	10148	0	
Polarity	10142	0		Polarity	10149	0	
Time Base	10143	0		Time Base	10150	0	
Time Base Multiplier	10144	0		Time Base Multiplier	10151	0	
Time Base Multiplier	10145	0		Time Base Multiplier	10152	0	
OC 1 Mode	10146	0		OC2 Mode	10153	0	

Item	Option	
OC1 Mode	0 = Not used	2 = SW negative
OC2 Mode	1 = Aux power	3 = Open collector

Table 5.16: Output Item Options

5.22 Remote output programming

Item	Location	Option	Default	New
Remote Output Mode	0772	0 = Legacy Mode, control outputs remotely only with event codes configured as Remote control 1 = Direct Mode, control outputs remotely with any event codes	1	

5.23 Time Programming

5.23.1 Entry Time 1

Item	Location	Option	Default	New
Increments of 1 sec. (0 to 15 sec.)	0466		4	
Increments of 16 sec. (0 to 240 sec.)	0467		1	

5.23.2 Entry Time 2

Item	Location	Option	Default	New
Increments of 1 sec. (0 to 15 sec.)	0468		8	
Increments of 16 sec. (0 to 240 sec.)	0469		2	

5.23.3 Exit Time (AWAY/STAY Modes)

Item	Location	Option	Default	New
Increments of 1 sec. (0 to 15 sec.)	0470		12	
Increments of 16 sec. (0 to 240 sec.)	0471		3	

5.23.4 Entry Guard Time For STAY Mode

Item	Location	Option	Default	New
Increments of 1 sec. (0 to 15 sec.)	0472		0	
Increments of 16 sec. (0 to 240 sec.)	0473		0	

5.23.5 Delay Alarm Report Time

Item	Location	Option	Default	New
Increments of 1 sec. (0 to 15 sec.)	0474		0	
Increments of 16 sec. (0 to 240 sec.)	0475		0	

5.23.6 Sensor Watch Time

Item	Location	Option	Default	New
Increments of days (tens digit)	0476		0	
Increments of days (units digit)	0477		0	

5.23.7 Codepad Lockout Time

Item	Location	Option	Default	New
Codepad Lockout Time	0478	0 = No lockout 1 – 15 = Lockout time 10 – 150 sec. (Increments of 10 sec.)	0	

5.23.8 Siren Run Time

Item	Location	Option	Default	New
Siren Run Time	0479	0 = No Siren time 1 – 15 = Siren time 1 – 15 min. (increments of 1 min.)	5	

5.23.9 Siren Sound Rate

Item	Location	Option	Default	New
Siren Sound Rate	0480	0 = Slowest frequency 15 = Fastest frequency	7	

5.23.10 Auto Arming Pre-Alert Time

Item	Location	Option	Default	New
Auto Arming Pre-Alert Time	0481	0 = No alert time 1 – 15 = Alert time 5 – 75 min. (increments of 5 min.)	1	

5.23.11 Auto Arming Time

Item	Location	Option	Default	New
Hour of the day (tens digit)	0482		0	
Hour of the day (units digit)	0483		0	
Minute of the day (tens digit)	0484		0	
Minute of the day (units digit)	0485		0	

5.23.12 Auto Disarming Time

Item	Location	Option	Default	New
Hour of the day (tens digit)	0486		0	
Hour of the day (units digit)	0487		0	
Minute of the day (tens digit)	0488		0	
Minute of the day (units digit)	0489		0	

5.23.13 Kiss-Off Wait Time

Item	Location	Option	Default	New
Increments of 500 ms (500 ms to 8 sec.)	0490		3	

5.23.14 Speaker Beep Volume

Item	Location	Option	Default	New
Speaker Beep Volume	0491	0 = No Beeps	13	

Item	Location	Option	Default	New
		15 = Loudest Beeps		

5.23.15 Speaker beep programming

Item	Location	Option	Default	New
Speaker beep when arm / disarm	0773	0 = Disable 1 = Enable	0	

5.23.16 Codepad volume programming

Item	Location	Option	Default	New
Codepad 1 volume	3808	0 = Minimum volume 7 = Maximum volume	7	
Codepad 2 volume	3811		7	
Codepad 3 volume	3814		7	
Codepad 4 volume	3817		7	

5.23.17 Codepad backlight programming

Item	Location	Option	Default	New
Codepad 1 backlight	3810	0 = Off 1 = Dim 2 = On	1	
Codepad 2 backlight	3813		1	
Codepad 3 backlight	3816		1	
Codepad 4 backlight	3819		1	

5.24 Options Programming

5.24.1 System Options 1

Item	Location	Option	Default	New
System Options 1	0492	1 = Bosch Security Systems smart lockout allowed 2 = Warning device fault monitor 4 = Strobe indication for radio arm/disarm 8 = Assign button 4 on keyfob to operate STAY Mode 1	1	



Notice!

Option 2 is available only when the warning device (such as horn speaker) is connected to any of the output 1 – 3.

5.24.2 System Options 2

Item	Location	Option	Default	New
System Options 2	0404	0 = All active and report	0	

Item	Location	Option	Default	New
		1 = Codepad Panic Alarm 2 = Codepad Fire Alarm 4 = Codepad Medical Alarm 8 = Reserved		
	0493	0 = All audible and report 1 = Codepad panic to be silent 2 = Codepad fire to be silent 4 = Codepad medical to be silent 8 = Access denied (code retries) to be silent	0	

5.24.3 System Options 3

Item	Location	Option	Default	New
System Options 3	0494	1 = AC fail after 1 hr. (Disabled = after 2 minutes.) 2 = Ignore AC fail 4 = Pulse count handover allowed 8 = Handover delay to be sequential	8	

5.24.4 System Options 4

Item	Location	Option	Default	New
System Options 4	0495	1 = Panel to power up disarmed (if power reset) 2 = Arm/disarm tracking on power up 4 = Onboard tamper enable 8 = Reserved	6	
	0109	System-wide Tamper (choose either 0 or 1 or 2 or 3): 0 = Tamper is ignored 1 = Silent Alarm for Tamper 2 = Audible Alarm for Tamper 3 = Show System Trouble for Tamper	7 (4 + 3)	
		4 = Codepad tamper enable		
		8 = Reserved		



Notice!

Codepad Tamper can be enabled (4) or disabled (0) in Location 109..

By default value 7 (4 + 3), Codepad Tamper is enabled and is handled as a system trouble with FAULT indicator light, but no siren activation.

5.24.5 System Options 5

Item	Location	Option	Default	New
System Options 5	0110	1 = Domestic Dial Fail to Report 2 = Installer Arm/Disarm Function 4 = Codepad alarm when siren is on 8 = Reserved	4	

5.24.6 Consumer Options 1

Item	Location	Option	Default	New
Consumer Options 1	0496	1 = Test reports only when armed 2 = Test report after siren reset 4 = Auto arm in STAY Mode 1 8 = STAY indicator to display day alarm status	0	

5.24.7 Consumer Options 2

Item	Location	Option	Default	New
Consumer Options 2	0497	1 = Codepad displays extinguish after 60 sec. 2 = Single button arming allowed (AWAY/STAY Modes 1 and 2) 4 = Single button disarming allowed (STAY Modes 1 and 2) 8 = Alarm memory reset on disarm	2	

5.24.8 Consumer Options 3

Item	Location	Option	Default	New
Consumer Options 3	0498	1 = Codepad fault beeps allowed 2 = Use digit 3 for codepad duress alarm (instead of digit 9) 4 = Alarms activate sirens and strobe outputs in STAY Modes 1 and 2 8 = Zone tamper alarms to be silent	5	

5.24.9 Partitioning Options 1

Item	Location	Option	Default	New
Partitioning Options 1	0500	1 = First to Disarm/Last to Arm reporting 2 = Reserved 4 = Reset sirens from any area allowed 8 = Reserved	0	

5.24.10 Partitioning Options 2

Item	Location	Option	Default	New
Partitioning Options 2	0501	1 = Reserved 2 = User codes allowed to arm/disarm both areas at same time (Code [0][#]) 4 = Reserved 8 = Reserved	0	

5.25 Partition Allocations

5.25.1 Zone Area Assignment (Zone 1-16)

Item	Location	Default	New	Item	Location	Default	New
Zone 1 Area	0502	1		Zone 2 Area	0503	1	
Zone 3 Area	0504	1		Zone 4 Area	0505	1	
Zone 5 Area	0506	1		Zone 6 Area	0507	1	
Zone 7 Area	0508	1		Zone 8 Area	0509	1	
Zone 9 Area	0510	1		Zone 10 Area	0511	1	
Zone 11 Area	0512	1		Zone 12 Area	0513	1	
Zone 13 Area	0514	1		Zone 14 Area	0515	1	
Zone 15 Area	0516	1		Zone 16 Area	0517	1	
Option							
0 = Zone area not assigned 1 = Zone assigned to Area 1				2 = Zone assigned to Area 2 3 = Zone assigned to both Area 1 and Area 2			

5.25.2 Zone Area Assignment (Zone 17-32)

Item	Location	Default	New	Item	Location	Default	New
Zone 17 Area	10046	1		Zone 18 Area	10047	1	
Zone 19 Area	10048	1		Zone 20 Area	10049	1	
Zone 21 Area	10050	1		Zone 22 Area	10051	1	
Zone 23 Area	10052	1		Zone 24 Area	10053	1	
Zone 25 Area	10054	1		Zone 26 Area	10055	1	
Zone 27 Area	10056	1		Zone 28 Area	10057	1	
Zone 29 Area	10058	1		Zone 30 Area	10059	1	
Zone 31 Area	10060	1		Zone 32 Area	10061	1	
Option							
0 = Zone area not assigned 1 = Zone assigned to Area 1				2 = Zone assigned to Area 2 3 = Zone assigned to both Area 1 and Area 2			

5.25.3 Codepad Assignment

Item	Location	Default	New	Item	Location	Default	New
Codepad 1 Area	0518	1		Codepad 2 Area	0519	0	
Codepad 3 Area	0520	0		Codepad 4 Area	0521	0	
Option							
0 = Codepad area not assigned				2 = Codepad assigned to Area 2			

Item	Location	Default	New	Item	Location	Default	New
1 = Codepad assigned to Area 1				3 = Codepad assigned to both Area 1 and Area 2			

5.25.4 User Code Area Assignment (User code 1-32)

Item	Location	Default	New	Item	Location	Default	New
User Code 1	0534	1		User Code 2	0535	1	
User Code 3	0536	1		User Code 4	0537	1	
User Code 5	0538	1		User Code 6	0539	1	
User Code 7	0540	1		User Code 8	0541	1	
User Code 9	0542	1		User Code 10	0543	1	
User Code 11	0544	1		User Code 12	0545	1	
User Code 13	0546	1		User Code 14	0547	1	
User Code 15	0548	1		User Code 16	0549	1	
User Code 17	0550	1		User Code 18	0551	1	
User Code 19	0552	1		User Code 20	0553	1	
User Code 21	0554	1		User Code 22	0555	1	
User Code 23	0556	1		User Code 24	0557	1	
User Code 25	0558	1		User Code 26	0559	1	
User Code 27	0560	1		User Code 28	0561	1	
User Code 29	0562	1		User Code 30	0563	1	
User Code 31	0564	1		User Code 32	0565	1	
Option							
0 = User code not assigned 1 = User code assigned to Area 1				2 = User code assigned to Area 2 3 = User code assigned to both Area 1 and Area 2			

5.25.5 User Code Area Assignment (User code 33-64)

Item	Location	Default	New	Item	Location	Default	New
User Code 33	12970	1		User Code 34	12971	1	
User Code 35	12972	1		User Code 36	12973	1	
User Code 37	12974	1		User Code 38	12975	1	
User Code 39	12976	1		User Code 40	12977	1	
User Code 41	12978	1		User Code 42	12979	1	
User Code 43	12980	1		User Code 44	12981	1	
User Code 45	12982	1		User Code 46	12983	1	
User Code 47	12984	1		User Code 48	12985	1	

Item	Location	Default	New	Item	Location	Default	New
User Code 49	12986	1		User Code 50	12987	1	
User Code 51	12988	1		User Code 52	12989	1	
User Code 53	12990	1		User Code 54	12991	1	
User Code 55	12992	1		User Code 56	12993	1	
User Code 57	12994	1		User Code 58	12995	1	
User Code 59	12996	1		User Code 60	12997	1	
User Code 61	12998	1		User Code 62	12999	1	
User Code 63	13000	1		User Code 64	13001	1	
Option							
0 = User code not assigned 1 = User code assigned to Area 1				2 = User code assigned to Area 2 3 = User code assigned to both Area 1 and Area 2			

5.26 Door Programming

Item	Location	Option	Default	New
Door enable	13098	0 = All doors disabled 1 = Door 1 enable 2 = Door 2 enable 4 = Door 3 enable 8 = Door 4 enable 15 = All doors enabled	0	

5.27 Codepad Assigned Door

Item	Location	Option	Default	New
Codepad 1 door	0522	0 = Door 1	15	
Codepad 2 door	0523	1 = Door 2	15	
Codepad 3 door	0524	2 = Door 3	15	
Codepad 4 door	0525	3 = Door 4	15	
		15 = No door is assigned	15	

5.28 User Door Assignment

Item	Location	Default	New	Item	Location	Default	New
User 1 access	14579	0		User 2 access	14581	0	
User 3 access	14583	0		User 4 access	14585	0	
User 5 access	14587	0		User 6 access	14589	0	
User 7 access	14591	0		User 8 access	14593	0	
User 9 access	14595	0		User 10 access	14597	0	

Item	Location	Default	New	Item	Location	Default	New
User 11 access	14599	0		User 12 access	14601	0	
User 13 access	14603	0		User 14 access	14605	0	
User 15 access	14607	0		User 16 access	14609	0	
User 17 access	14611	0		User 18 access	14613	0	
User 19 access	14615	0		User 20 access	14617	0	
User 21 access	14619	0		User 22 access	14621	0	
User 23 access	14623	0		User 24 access	14625	0	
User 25 access	14627	0		User 26 access	14629	0	
User 27 access	14631	0		User 28 access	14633	0	
User 29 access	14635	0		User 30 access	14637	0	
User 31 access	14639	0		User 32 access	14641	0	
User 33 access	14643	0		User 34 access	14645	0	
User 35 access	14647	0		User 36 access	14649	0	
User 37 access	14651	0		User 38 access	14653	0	
User 39 access	14655	0		User 40 access	14657	0	
User 41 access	14659	0		User 42 access	14661	0	
User 43 access	14663	0		User 44 access	14665	0	
User 45 access	14667	0		User 46 access	14669	0	
User 47 access	14671	0		User 48 access	14673	0	
User 49 access	14675	0		User 50 access	14677	0	
User 51 access	14679	0		User 52 access	14681	0	
User 53 access	14683	0		User 54 access	14685	0	
User 55 access	14687	0		User 56 access	14689	0	
User 57 access	14691	0		User 58 access	14693	0	
User 59 access	14695	0		User 60 access	14697	0	
User 61 access	14699	0		User 62 access	14701	0	
User 63 access	14703	0		User 64 access	14705	0	
Option							
0 = No door is assigned 1 = Door 1 2 = Door 2				4 = Door 3 8 = Door 4 15 = All doors are assigned			

5.29 Schedule Programming

Item	Location	Option	Default	New
Schedule enable	14197 - 14198	0 0 = All schedules disabled 1 0 = Schedule 1 enable 2 0 = Schedule 2 enable 4 0 = Schedule 3 enable 8 0 = Schedule 4 enable 0 1 = Schedule 5 enable 0 2 = Schedule 6 enable 0 4 = Schedule 7 enable 0 8 = Schedule 8 enable 15 15 = All schedules enabled	0 0	

5.30 Default Options

Item	Location	Option	Default	New
Button Default Options	0900	0 = Button Factory Default Enable 15 = Button Factory Default Disabled	0	

5.31 RFID Programming

5.31.1 Keyfob RFID (Keyfob 1-32)

Item	Location	Default	New	Item	Location	Default	New
Keyfob #01	1500 - 1507	0		Keyfob #02	1510 - 1517	0	
Keyfob #03	1520 - 1527	0		Keyfob #04	1530 - 1537	0	
Keyfob #05	1540 - 1547	0		Keyfob #06	1550 - 1557	0	
Keyfob #07	1560 - 1567	0		Keyfob #08	1570 - 1577	0	
Keyfob #09	1580 - 1587	0		Keyfob #10	1590 - 1597	0	
Keyfob #11	1600 - 1607	0		Keyfob #12	1610 - 1617	0	
Keyfob #13	1620 - 1627	0		Keyfob #14	1630 - 1637	0	
Keyfob #15	1640 - 1647	0		Keyfob #16	1650 - 1657	0	
Keyfob #17	1660 - 1667	0		Keyfob #18	1670 - 1677	0	
Keyfob #19	1680 - 1687	0		Keyfob #20	1690 - 1697	0	
Keyfob #21	1700 - 1707	0		Keyfob #22	1710 - 1717	0	
Keyfob #23	1720 - 1727	0		Keyfob #24	1730 - 1737	0	
Keyfob #25	1740 - 1747	0		Keyfob #26	1750 - 1757	0	
Keyfob #27	1760 - 1767	0		Keyfob #28	1770 - 1777	0	
Keyfob #29	1780 - 1787	0		Keyfob #30	1790 - 1797	0	
Keyfob #31	1800 - 1807	0		Keyfob #32	1810 - 1817	0	

5.31.2 Keyfob RFID (Keyfob 33-64)

Item	Location	Default	New	Item	Location	Default	New
Keyfob #33	10314 - 10322	0		Keyfob #34	10324 - 10331	0	
Keyfob #35	10334 - 10341	0		Keyfob #36	10344 - 10351	0	
Keyfob #37	10354 - 10361	0		Keyfob #38	10364 - 10371	0	
Keyfob #39	10374 - 10381	0		Keyfob #40	10384 - 10391	0	
Keyfob #41	10394 - 10401	0		Keyfob #42	10404 - 10411	0	
Keyfob #43	10414 - 10421	0		Keyfob #44	10424 - 10431	0	
Keyfob #45	10434 - 10441	0		Keyfob #46	10444 - 10451	0	

Item	Location	Default	New	Item	Location	Default	New
Keyfob #47	10454 - 10461	0		Keyfob #48	10464 - 10471	0	
Keyfob #49	10474 - 10481	0		Keyfob #50	10484 - 10491	0	
Keyfob #51	10494 - 10501	0		Keyfob #52	10504 - 10511	0	
Keyfob #53	10514 - 10521	0		Keyfob #54	10524 - 10531	0	
Keyfob #55	10534 - 10541	0		Keyfob #56	10544 - 10551	0	
Keyfob #57	10554 - 10561	0		Keyfob #58	10564 - 10571	0	
Keyfob #59	10574 - 10581	0		Keyfob #60	10584 - 10591	0	
Keyfob #61	10594 - 10601	0		Keyfob #62	10604 - 10611	0	
Keyfob #63	10614 - 10621	0		Keyfob #64	10624 - 10631	0	

5.31.3 Zone/Device RFID and RF Zone Option (Zone 1-16)

Item	Location	Default	New	RF Zone Option Location	Default	New
RF Zone #01	1820 - 1827	0		1828	0	
RF Zone #02	1830 - 1837	0		1838	0	
RF Zone #03	1840 - 1847	0		1848	0	
RF Zone #04	1850 - 1857	0		1858	0	
RF Zone #05	1860 - 1867	0		1868	0	
RF Zone #06	1870 - 1877	0		1878	0	
RF Zone #07	1880 - 1887	0		1888	0	
RF Zone #08	1890 - 1897	0		1898	0	
RF Zone #09	1900 - 1907	0		1908	0	
RF Zone #10	1910 - 1917	0		1918	0	
RF Zone #11	1920 - 1927	0		1928	0	
RF Zone #12	1930 - 1937	0		1938	0	
RF Zone #13	1940 - 1947	0		1948	0	
RF Zone #14	1950 - 1957	0		1958	0	
RF Zone #15	1960 - 1967	0		1968	0	

Item	Location	Default	New	RF Zone Option Location	Default	New
RF Zone #16	1970 - 1977	0		1978	0	
Item						
Option						
RF Zone Option		0 = All Used	1 = Input 1 2 = Input 2		4 = Input 3 8 = Input 4	

Table 5.17: RF Zone Options

5.31.4 Zone/Device RFID and RF Zone Option (Zone 17-32)

Item	Location	Default	New	RF Zone Option Location	Default	New
RF Zone #17	10634 - 10641	0		10642	0	
RF Zone #18	10644 - 10651	0		10652	0	
RF Zone #19	10654 - 10661	0		10662	0	
RF Zone #20	10664 - 10671	0		10672	0	
RF Zone #21	10674 - 10681	0		10682	0	
RF Zone #22	10684 - 10691	0		10692	0	
RF Zone #23	10694 - 10701	0		10702	0	
RF Zone #24	10704 - 10711	0		10712	0	
RF Zone #25	10714 - 10721	0		10722	0	
RF Zone #26	10724 - 10731	0		10732	0	
RF Zone #27	10734 - 10741	0		10742	0	
RF Zone #28	10744 - 10751	0		10752	0	
RF Zone #29	10754 - 10761	0		10762	0	
RF Zone #30	10764 - 10771	0		10772	0	

Item	Location	Default	New	RF Zone Option Location	Default	New
RF Zone #31	10774 - 10781	0		10782	0	
RF Zone #32	10784 - 10791	0		10792	0	

Item	Option		
RF Zone Option	0 = All Used	1 = Input 1 2 = Input 2	4 = Input 3 8 = Input 4

Table 5.18: RF Zone Options

5.31.5 Repeater RFID

Item	Location	Default	New	Item	Location	Default	New
Repeater #01	1980 - 1987	0		Repeater #02	1990 - 1997	0	
Repeater #03	2000 - 2007	0		Repeater #04	2010 - 2017	0	
Repeater #05	2020 - 2027	0		Repeater #06	2030 - 2037	0	
Repeater #07	2040 - 2047	0		Repeater #08	2050 - 2057	0	

5.32 Program with A-Link Plus or Alphanumeric Codepad



Notice!

Recommend to use A-Link plus to program below parameters.

5.32.1 Home Message

In the A-Link Plus, select One Solution -> Solution 4000, then go to System -> System Option -> Home Message, enter up to 18 case sensitive alphanumeric characters.

In the Alphanumeric codepad, **Bosch Security Co.** is displayed as the home message.

Item	Default	New
Home Message	blank	

5.32.2 User Names

In the A-Link Plus, select One Solution ->Solution 4000 , then go to Access -> User Property, select the user and enter up to 12 case sensitive alphanumeric characters for the user name.

Item	New	Item	New
User 1 Name		User 2 Name	
User 3 Name		User 4 Name	
... ..			

5.32.3 Zone Names

In the A-Link Plus, select One Solution ->Solution 4000 , then go to Zone -> Zone Name, select the zone and enter up to 12 case sensitive alphanumeric characters for the zone name.

Item	New	Item	New
Zone 1 Name		Zone 2 Name	
Zone 3 Name		Zone 4 Name	
... ..			

5.32.4 Area Names

In the A-Link Plus, select One Solution ->Solution 4000 , then go to Area -> Area 1 Name or Area 2 Name, enter up to 12 case sensitive alphanumeric characters.

Item	New	Item	New
Area 1 Name		Area 2 Name	

5.32.5 Output Names

In the A-Link Plus, select One Solution ->Solution 4000 , then go to Output -> Output, select the output and enter up to 12 case sensitive alphanumeric characters for the output name.

Item	New	Item	New
Output 1 Name		Output 2 Name	
Output 3 Name		Output 4 Name	
... ..			

5.32.6 Schedules

In the A-Link Plus, select One Solution -> Solution 4000, make sure to enable schedule, then program the schedule parameters:

- Go to Schedules -> Enable Schedule, make sure the schedule you will configure Schedule settings is enabled.
- Go to Schedules -> User group Holiday setting, use it to program the user group with selected users; and set or clear a holiday.
- Go to Schedules -> Schedule settings, use it to program the control panel to automatically execute functions for your enabled schedule.

When using the Alphanumeric codepad, program schedule parameters from the Programming Menu [8] [4] [Schedule].

5.32.7 Doors

In the A-Link Plus, select One Solution -> Solution 4000, then program the door access parameters:

- Go to Access -> User Property, set the User Allocate and User Authority for the users who will operate the door functions.
 - To cycle / lock / unlock / secure /unsecure the doors, grant the user with Master Code authority.

- Go to Access -> User Property, enter the Site Code and Card Data for user credential information.
- Go to Doors -> Door 1 - 4, use the parameters to configure each door.
- Go to Doors -> Global Access Settings, select the card format used for all door controllers.
- Go to Doors -> Keypad (Codepad) assigned door, use this parameters to select the door that only the corresponding codepad(s) can operate.

When using the Alphanumeric codepad, program door parameters from the Programming Menu [9] [Door].

5.32.8

Network Module

In the A-Link Plus, select One Solution ->Solution 4000, then program the network module parameter.


- Go to Comm -> Network Config, select Use, B4xx-M to enable the network module 1 or 2.
- Go to Network module programming -> Module 1# or Module 2#, use the parameters to configure each module.

Refer to

- External Network Module, page 28

6 Appendices

6.1 Connections for EOL Resistors

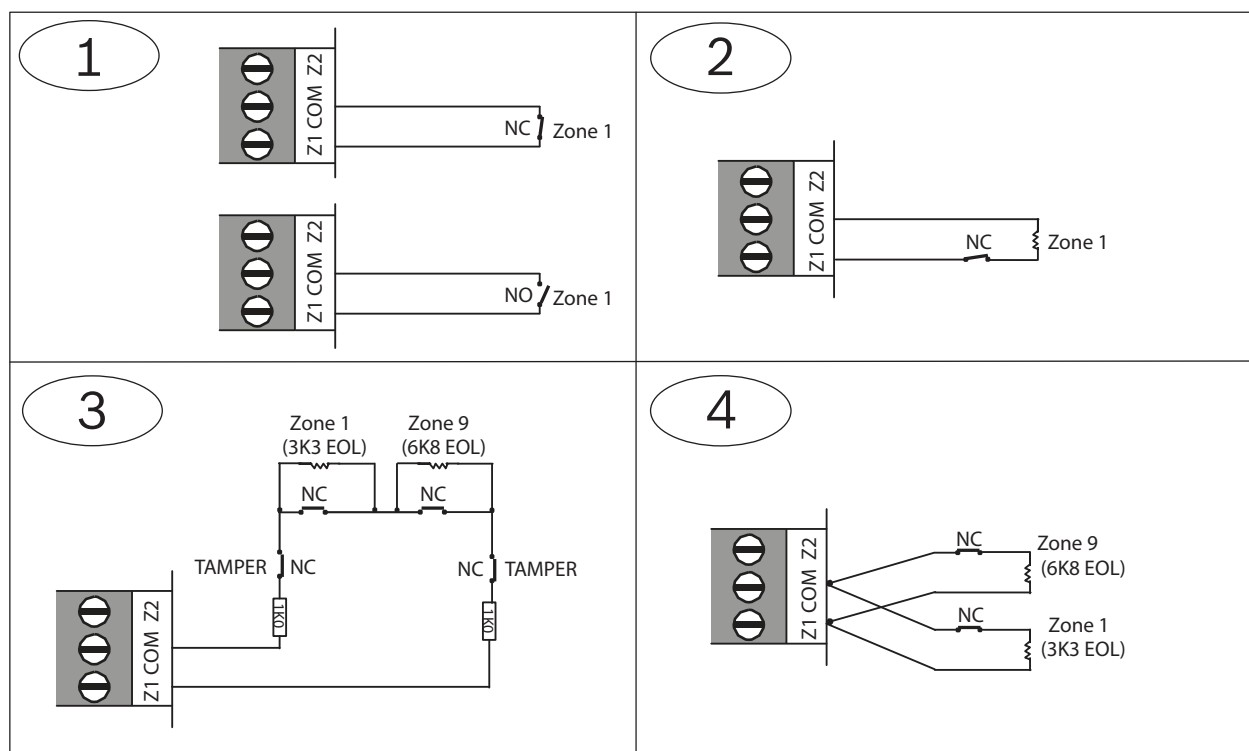

Callout - Description

- | |
|---|
| 1 - Zone without resistor (Location 266 = 0 (No EOL), Location 266 = 12 (Normal open)) |
| 2 - Single Zone input (Location 266 = 1k, 1k5, 2k2, 3k3, 3k9, 4k7, 5k6, 6k8, 10k, 12k, 22k) |
| 3 - Double Zone with tamper (Location 266 = 14 (Split EOL3K3 / 6K8 with tamper)) |
| 4 - Double Zone input (Location 266 = 15 (Split EOL 3k3 / 6k8)) |

6.2 Wiring Diagram

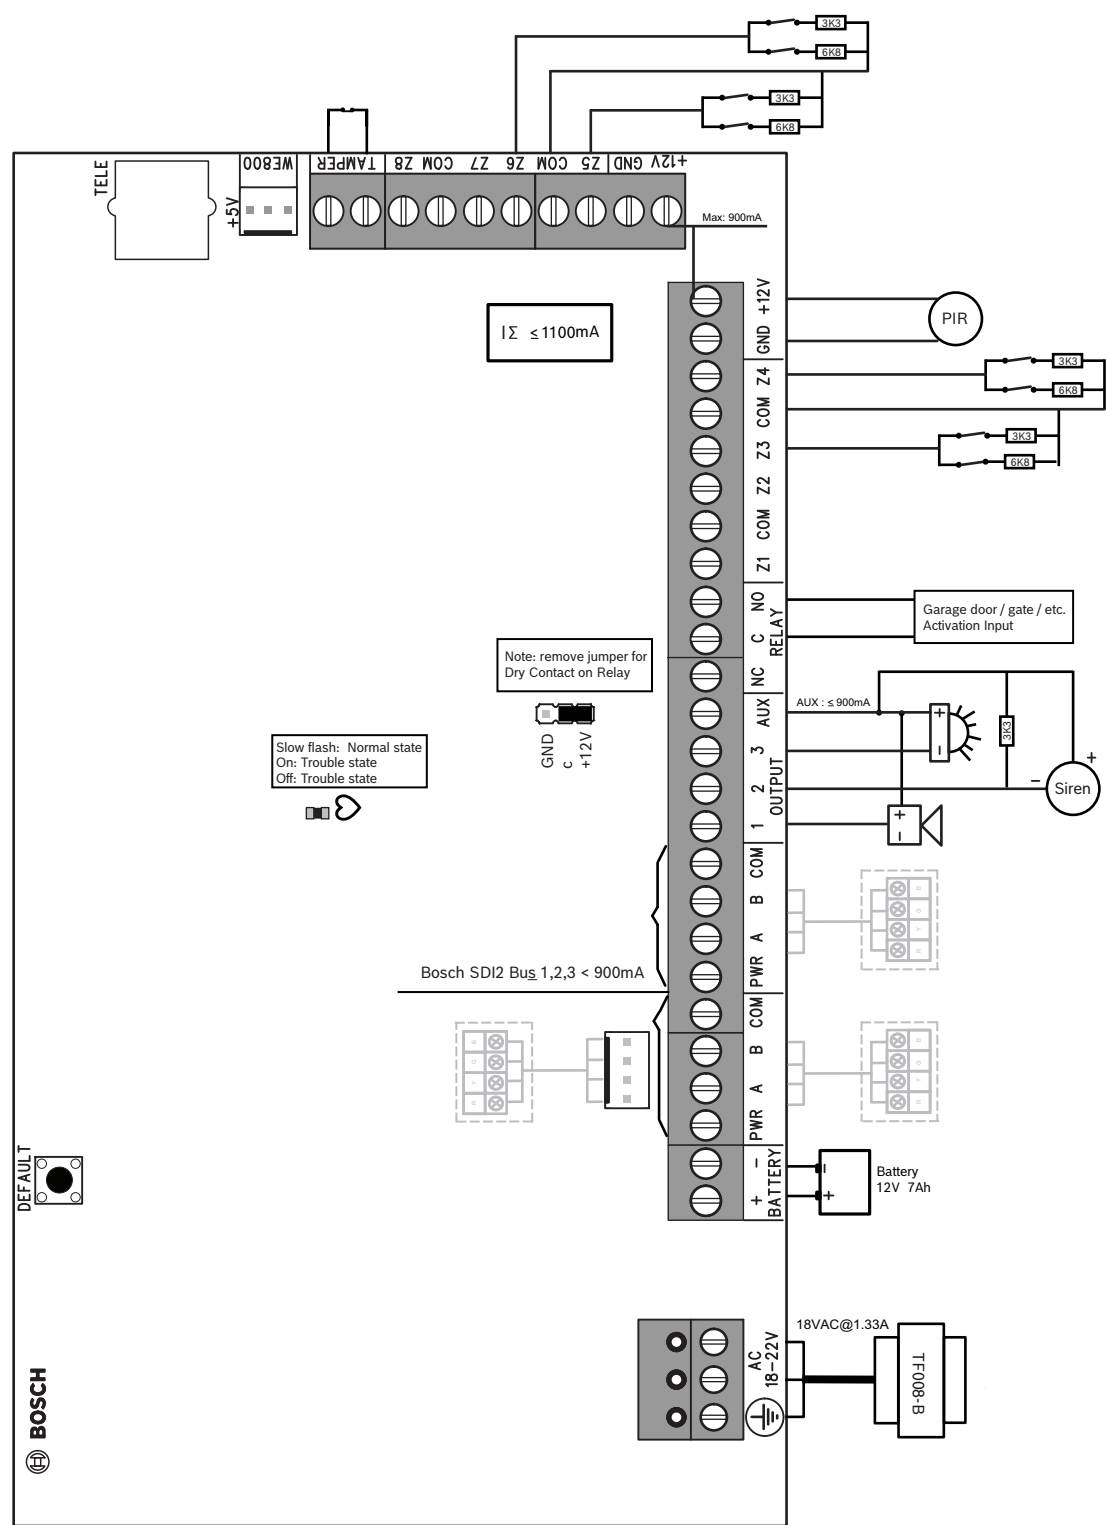


Figure 6.1: Wiring Diagram_FW v1.1.0

6.3 Component Overlay

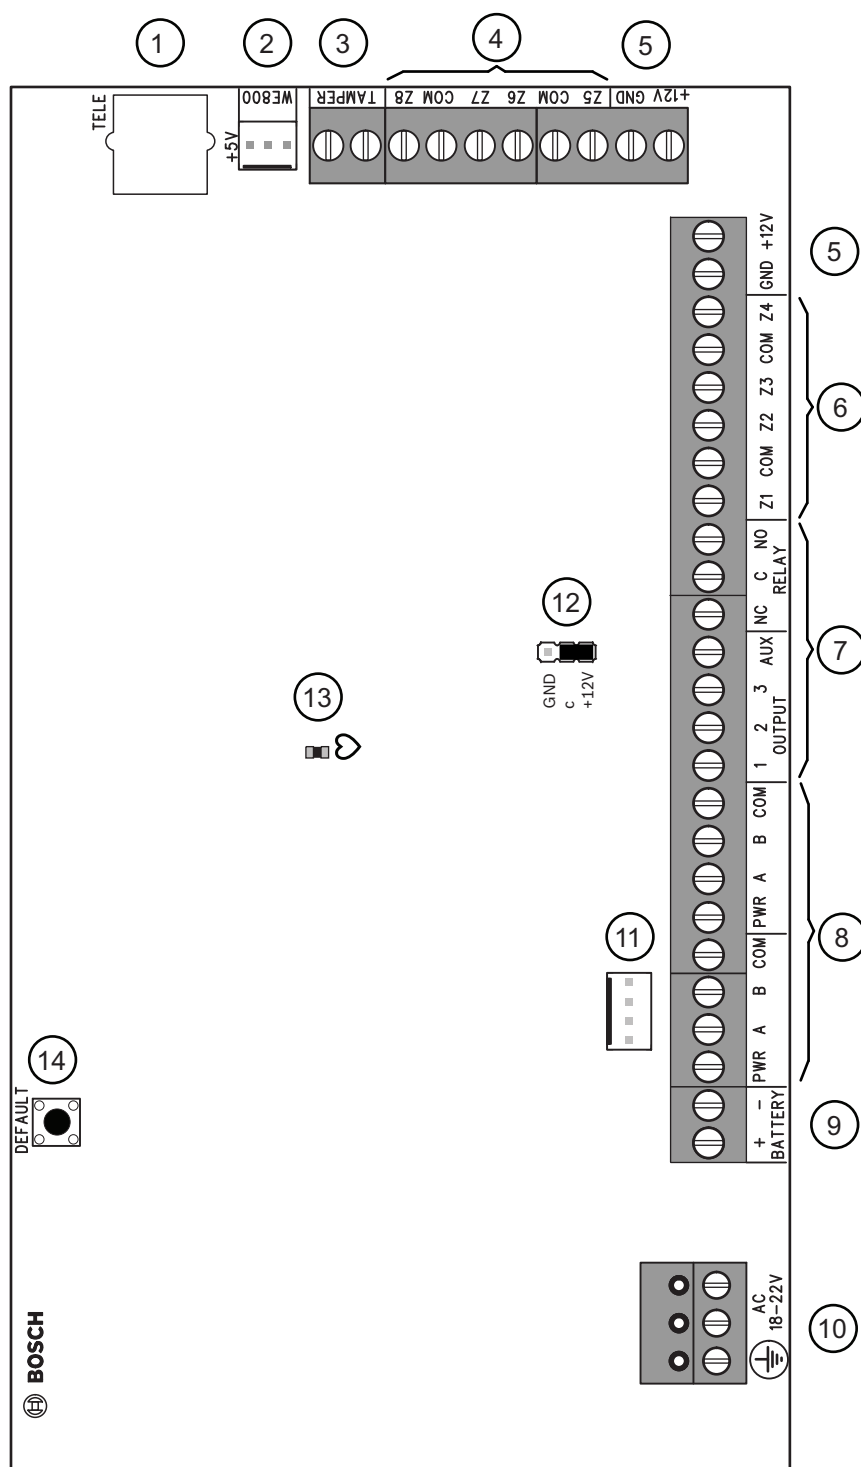


Figure 6.2: Component Overlay

Callout --Description	Callout --Description
1 - Socket for telecom lead connect	8 - Bosch SDI2 Bus
2 - Receiver interface connection	9 - Battery input
3 - Tamper switch	10 - Plug pack input (Bosch TF008)

Callout --Description	Callout --Description
4 - Zone 5-8 termination strip (for zone 5-8 and zone 13-16)	11 - Bosch SDI2 Bus
5 - AUX power	12 - Relay contact select (Select output AUX as shown or output GND)
6 - Zone 1-4 termination strip (for zone 1-4 and zone 9-12)	13 - LED indicator
7 - Output termination strip	14 - Default button

Table 6.1: Callout description

6.4

Codepad Address Setting

DIP Switch Codepad Address	DIP Switch Number					
	1	2	3	4	5	6
1	On	Off	Off	Off	Off	On
2	Off	On	Off	Off	Off	On
3	On	On	Off	Off	Off	On
4	Off	Off	On	Off	Off	On

Table 6.2: Codepad DIP switch address setting

Bosch Security Systems B.V.

Torenallee 49

5617 BA Eindhoven

Netherlands

www.boschsecurity.com

© Bosch Security Systems B.V., 2025

Building solutions for a better life

202511130346